


AKAI SERVICE MANUAL

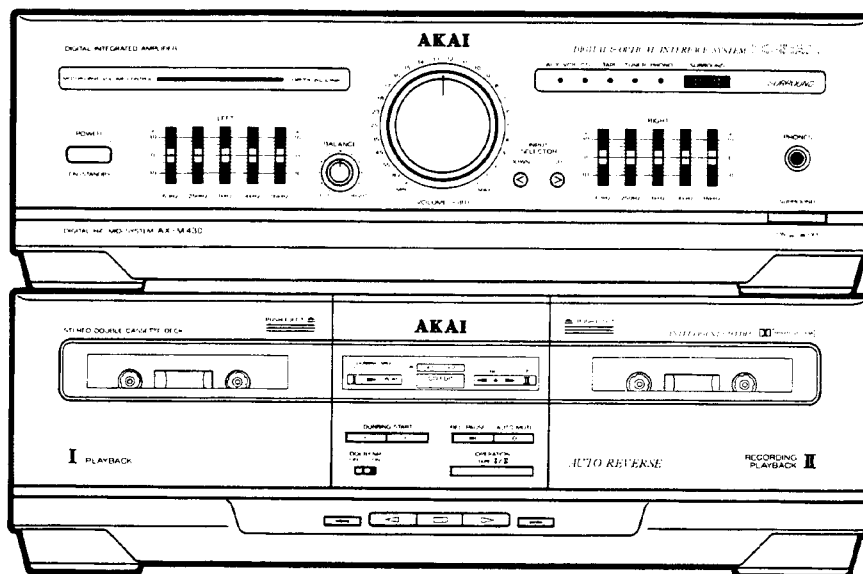

DIGITAL HIFI MIDI SYSTEM


MODEL AX-M430

SPECIFICATIONS

<p>[AMPLIFIER section]</p> <p>Power output 45 W + 45 W (6 ohms, EIAJ) 35 W + 35 W (6 ohms, DIN)</p> <p>Music power 170 W</p> <p>PMPO 400 W</p> <p>THD 0.15 % (1kHz)</p> <p>Frequency response 10 Hz to 100 KHz (10 Hz: -1.5 dB/100 KHz: -8 dB)</p> <p>GEQ Center frequency 63 Hz, 250 Hz, 1 kHz, 4 kHz, 16 kHz</p> <p>Adjust range ± 8 dB</p> <p>S / N ratio (IHF-A) 72 dB (PHONO MM) 85 dB (etc)</p> <p>Required speaker 6 ohms to 16 ohms impedance (surround: 8 ohms to 16 ohms)</p> <p>Input level / Impedance</p> <p>CD (optical) -22 dBm</p> <p>PHONO 1.8 mV / 47 kohms</p> <p>AUX / VCR 90 mV / 47 kohms</p> <p>D / A Converter 16 bit twin D / A converter</p> <p>Digital filter 16 bit / 4fs</p>	<p>[CASSETTE DECK section]</p> <p>Frequency response</p> <p>Normal tape 30 Hz to 14 KHz</p> <p>CrO₂ tape 30 Hz to 15 KHz</p> <p>Wow & flutter</p> <p>TAPE I 0.09% (WRMS) 0.18% (DN)</p> <p>TAPE II 0.06% (WRMS) 0.14% (DN)</p> <p>Heads</p> <p>TAPE I HD head for Playback head x1</p> <p>TAPE II HD head for PB/REC head x1</p> <p>Erase head x1</p> <p>[GENERAL]</p> <p>Power requirements AC220 V - 230 V, 50 Hz for Europe except UK AC240 V, 50 Hz for UK & Australia AC110 V/120 V/220 V/240 V, 50 / 60 Hz convertible for other countries</p> <p>Dimensions 360 (W) x 236 (H) x 315 (D) mm</p> <p>Weight 7.7 kg</p> <p>Standard accessories</p> <p>Remote control unit x 1</p> <p>Batteries x 2</p> <p>Operator's manual x 1</p>
--	---

*For improvement purposes, specifications and design are subject to change without notice.

 
*Noise reduction manufactured under license from Dolby Laboratories Licensing Corporation.

"DOLBY" and  symbol are trademarks of Dolby Licensing Corporation.

★ SAFETY INSTRUCTIONS

PRECAUTIONS DURING SERVICING

1. Parts identified by the (*) symbol are critical for safety. Replace only with parts number specified.
2. In addition to safety, other parts and assemblies are specified for conformance with such regulations as those applying to spurious radiation.
These must also be replaced only with specified replacements.
Examples: RF converters, tuner units, antenna selector switches, RF cables, noise blocking capacitors, noise blocking filters, etc.
3. Use specified internal wiring. Note especially:
 - 1) Wires covered with PVC tubing
 - 2) Double insulated wires
 - 3) High voltage leads
4. Use specified insulating materials for hazardous live parts. Note especially:
 - 1) Insulation Tape
 - 2) PVC tubing
 - 3) Spacers (insulating barriers)
 - 4) Insulation sheets for transistors
 - 5) Plastic screws for fixing microswitch (especially in turntable)
5. When replacing AC primary side components (transformers, power cords, noise blocking capacitors, etc.), wrap ends of wires securely about the terminals before soldering.

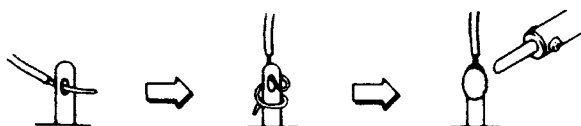

6. Observe that wires do not contact heat producing parts (heatsinks, oxide metal film resistors, fusible resistors, etc.).

7. Check that replaced wires do not contact sharp edged or pointed parts.
8. Also check areas surrounding repaired locations.
9. Use care that foreign objects (screws, solder droplets, etc.) do not remain inside the set.

SAFETY CHECK AFTER SERVICING

After servicing, make measurements of leakage-current or resistance in order to determine that exposed parts are acceptably insulated from the supply circuit.

The leakage-current measurement should be done between accessible metal parts (such as chassis, ground terminal, microphone jacks, signal input/output connectors, etc.) and the earth ground through a resistor of 1500 ohms paralleled with a 0.15 μ F capacitor, under the unit's normal working conditions. The leakage-current should be less than 0.5 mA rms AC.

The resistance measurement should be done between accessible exposed metalparts and power cord plug prongs with the power switch (if included) "ON". The resistance should be more than 2.2 Mohms.

MAKE YOUR CONTRIBUTION TO PROTECT THE ENVIRONMENT

Used batteries with the ISO symbol for recycling as well as small accumulators (rechargeable batteries), mini-batteries (cells) and starter batteries should not be thrown into the garbage can.

Please leave them at an appropriate depot. All other household batteries can be thrown out with the household waste.



★ INFORMATION

SYMBOLS FOR PRIMARY DESTINATION

Alphabet indicates the destination of the units as listed below.

Symbol	Principal Destinations
B	UK
E	Europe (except UK)
S	Australia
V	Germany
U	Universal Area
Y*	Custom version

PRECAUTION BEFORE/AFTER REPAIRING THE UNIT

[ABOUT THE POWER SUPPLY]


Power supply of the AX-M430 is controlled by the tuner. Therefore when repair of the AX-M430 is necessary, repair should be made together with the tuner.

To repair the AX-M430 without tuner, use the following procedure.

- 1) While pushing the PLAY (▶) button, press the POWER button to turn the power of the AX-M430 on.
- 2) To turn off the power of the AX-M430 the AC power cord must be disconnected.

VOLTAGE CONVERSION (U Model only)


Before connecting the cord. Set the VOLTAGE SELECTOR located on the rear panel so that the correct voltage for your area is indicated.

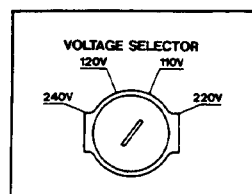


I. DISASSEMBLY

In case of trouble, etc., necessitating dismantling, please dismantle in the order shown in the illustrations. Reassemble in reverse order.


1. Removal of UPPER COVER

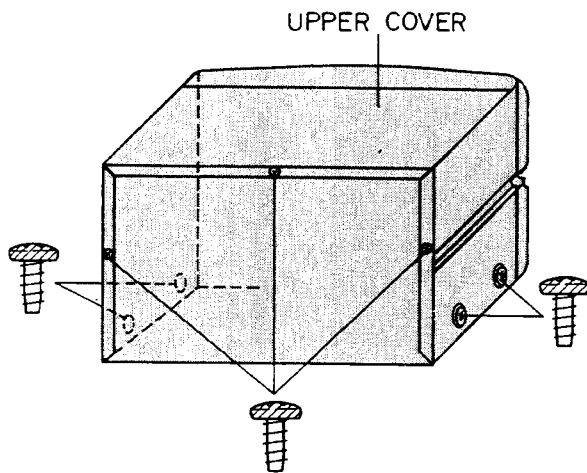

3.

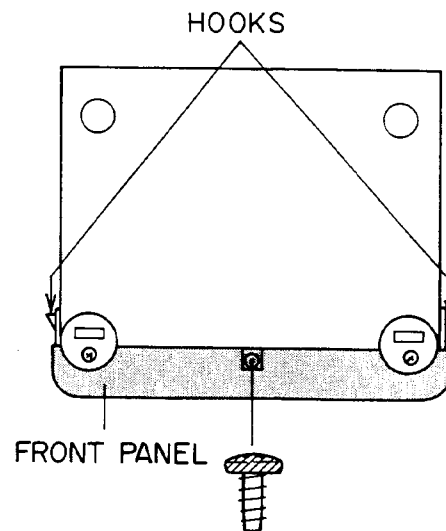


2. Removal of the FRONT PANEL BLOCK

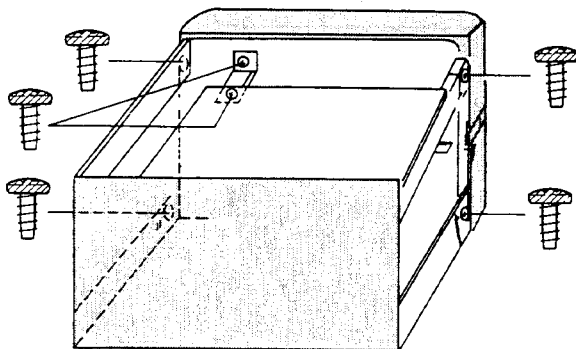

- 1) Disconnect all connectors (except J10) connected to the front panel.

4. Removal of the CASSETTE MECHA BLOCK

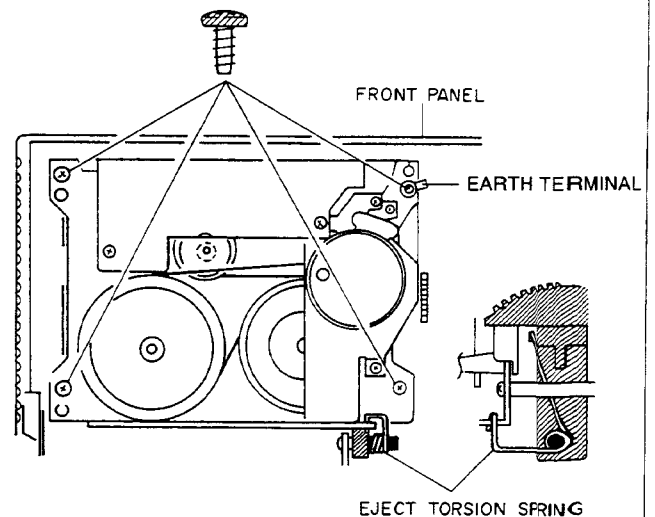

- 1) Unhook the EJECT TORSION SPRING
- 2) Removal the four MECHA BLOCK fixation screws.

II. PRINCIPAL PARTS LOCATION

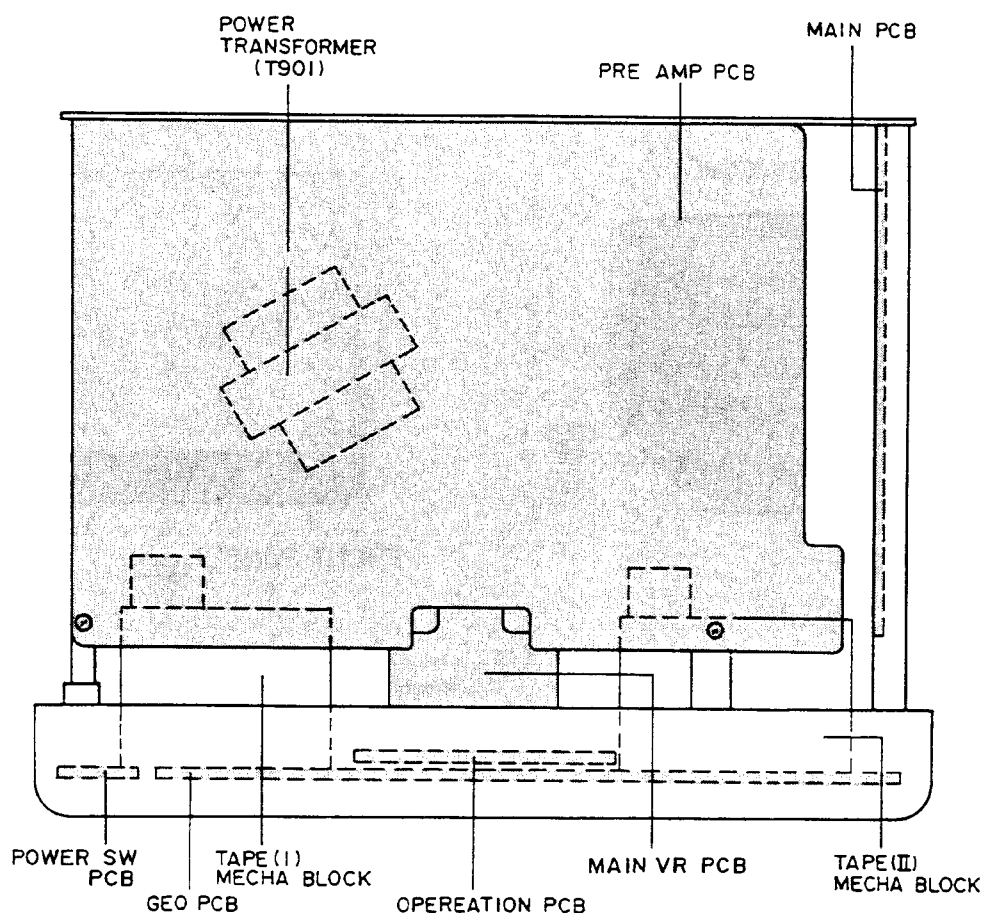


Fig. 2-1 Top view

III. MECHANICAL ADJUSTMENT

[PRECAUTION]

- * Before adjustment, clean and de-magnetize the heads and tape guides.
- * Do not use the magnetized tools for the following adjustment.

3-1. CONFIRMATION OF THE WINDING TORQUE IN EACH MODE

Insert a CASSETTE TORQUE METER (AT-751179) and measure the torque in each mode. For fast forward and rewind, measure the torque at the end of the tape when tape has stopped running.

[PLAY BACK mode]

Take up torque: 35 to 75 g-cm

Back tension torque: 2 to 6 g-cm

[FAST FORWARD and REWIND mode]

Take up torque: 70 to 160 g-cm

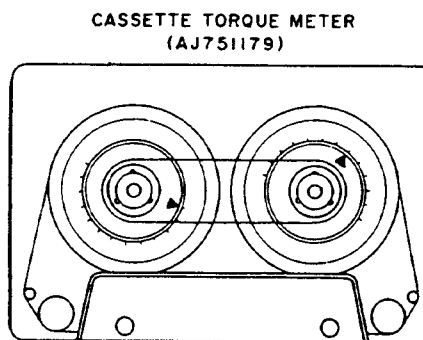


Fig.3-1

3-2. ADJUSTMENT OF THE TAPE GUIDE HEIGHT (TAPE II)

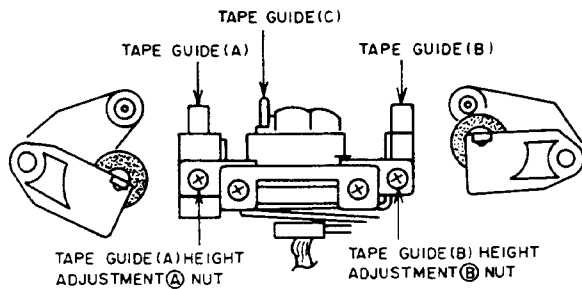


Fig. 3-2

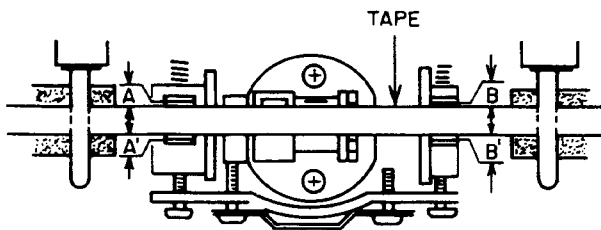


Fig. 3-3

- 1) Load the MIRROR CASSETTE TAPE (AJ-751178) and engage the FWD PLAY mode.
- 2) Adjust TAPE GUIDE (A) HEIGHT ADJUSTMENT (A) screw so that both spaces (A and A') on the TAPE GUIDE (A) are equal.
- 3) Adjust TAPE GUIDE (B) HEIGHT ADJUSTMENT (B) screw so that both spaces (B and B') on the TAPE GUIDE (B) are equal.
- 4) Repeat above 2) and 3) until tape runs smoothly and without any curls or wrinkle at the TAPE GUIDE (A), (B) and (C).
- 5) After adjustment, paint-lock the adjustment (A) and (B) screw.

3-3. ADJUSTMENT OF THE PB HEAD AZIMUTH ALIGNMENT (TAPE I)

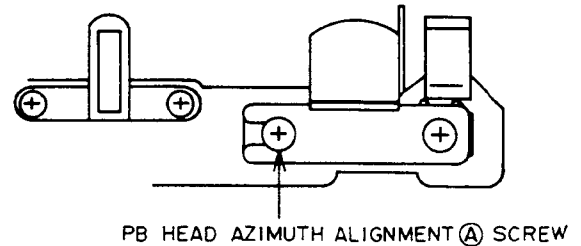


Fig. 3-4

- 1) Connect the AC milli-voltmeters to L-ch. and R-ch. of the VCR/AUX OUT on the amplifier and connect oscilloscope's input CH-1 and CH-2 to output of the AC milli-voltmeters.
- 2) Play back a 10 kHz (-15 dB), HEAD AZIMUTH ALIGNMENT test tape (AT-750778) and adjust (A) screw so that the reading on the AC milli-voltmeters are at maximum and waveforms on the oscilloscope are in the same phase.
- 3) After adjustment, paint-lock the adjustment (A) screw

3-4. ADJUSTMENT OF THE REC/PB HEAD AZIMUTH ALIGNMENT (TAPE II)

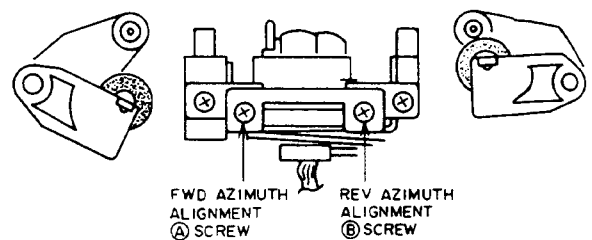


Fig. 3-5

- 1) Connect the AC milli-voltmeters to L-ch. and R-ch. of the VCR/AUX OUT on the amplifier and connect oscilloscope's input CH-1 and CH-2 to output of the AC milli-voltmeters.
- 2) Play back a 10 kHz (-15 dB), HEAD AZIMUTH ALIGNMENT test tape (AT-750778) and adjustment (A) (FWD PLAY) or (B) (REV PLAY) SCREW so that the reading on the AC milli-voltmeters are at maximum and waveforms on the oscilloscope are in the same phase.
- 3) After adjustment, paint-lock the adjustment (A) and (B) screws.

IV. ELECTRICAL ADJUSTMENT

[PRECAUTIONS BEFORE ADJUSTMENT]

1. Before adjustment, clean and de-magnetize heads and tape guides.

STEP	ADJUSTMENT ITEM
1.	TEST TAPE/INPUT SIGNAL
2.	MODE
3.	TEST POINT/ADJUSTMENT PART
4.	(•) REMAKERS, (*) RESULT

Adjustment Part


ABOUT THE TEST MODE

Be sure to engage the test mode before proceeding with electrical adjustment

1. To engage the test mode, short the TEST AND TEST GND
2. The "CD EDIT" indicator will appear on the front panel
3. To disengage the test mode turn the power off

1	TAPE I (X2) TAPE SPEED
1.	3,150 Hz test tape (AT-751263)
2.	PLAY (Push x 2 DUBBING START button)
3.	AUX / VCR OUT / VR 1
4.	• Connect a frequency counter to AUX / VCR OUT. * 6,300 \pm 20 Hz

2.	TAPE I NORMAL TAPE SPEED
1.	3,150 Hz test tape (AT-751263)
2.	PLAY
3.	AUX / VCR OUT / VR 3
4.	• Connect a frequency counter to AUX / VCR OUT. * 3,150 \pm 10 Hz

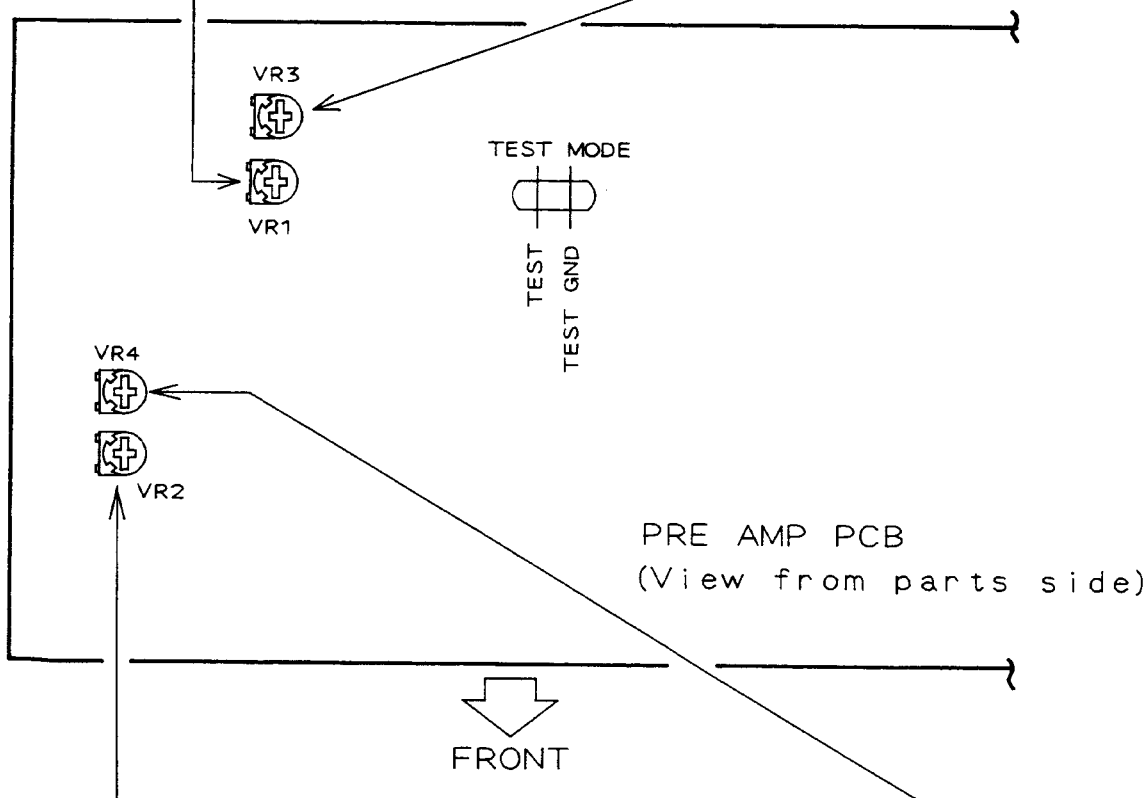

3.	TAPE II (X2) TAPE SPEED
1.	3,150 Hz test tape (AT-751263)
2.	PLAY (Push X2 DUBBING START button)
3.	AUX / VCR OUT / VR 2
4.	• Connect a frequency counter to AUX / VCR OUT. * 5 Hz to 10 Hz lower than the result in STEP 1 [TAPE I (X2) TAPE SPEED]

4.	TAPE II NORMAL TAPE SPEED
1.	3,150 Hz test tape (AT-751263)
2.	PLAY
3.	AUX / VCR OUT / VR 4
4.	• Connect a frequency counter to AUX / VCR OUT. * 5 Hz to 10 Hz lower than the result in STEP 2 [TAPE I NORMAL TAPE SPEED]

V. PARTS LIST

ATTENTION

1. When placing an order for parts, be sure to list Part No., Model No. and the description of each part. Otherwise, the non-delivery of the part or the delivery of a wrong part may result.
2. Please make sure that Part No. is correct when ordering.
If not, a part different from the one you ordered may be delivered.
3. Since the parts shown in Parts List of Preliminary Service Manual may have been the subject of changes, please use this Parts List for all future reference.

HOW TO USE THIS PARTS LIST

1. This Parts List lists those parts which are considered necessary for repairs. Other common parts, such as resistors and capacitors, are listed in the "Common List for Service Parts" from which these parts should be selected and stocked.
2. The Recommended Spare Parts List shows those parts in the Parts List which are considered particularly important for service.
3. Parts not shown in the Parts List and "Common List for Service Parts" will not in principle be supplied.
4. How to read the Parts List.

a) Mechanism Block

2. HEAD BASE BLOCK

Ref. No.	Part No.	Description
1	BH-T2023A320A	HEAD BASE BLOCK
2	HP-H2206A010A	HEAD R/P PR4-8FU C
3	ZS-477876	PAN20×03STL CMT
4	ZS-536488	BID20×08STL CMT
5	ZG-402895	SP CS ANGLE ADJUST

SP (Service Parts) Classification

This number corresponds with the individual parts index number in that figure.

b) PC Board

6. MAIN PC BOARD

Ref. No.	Part No.	Description
IC1	EI-324536	IC HD14049BP
IC2	EI-336801	IC MB8841-564M
C1A	EC-338399	C MMY V 223M 250AC [U.E.B.S]
C1B	EC-350949	C MMY V 223M 250DC [J]
C1C	EC-338397	C MMY V 223M 125AC [CA]
X1	EI-318384	OSC X'TAL NC-18C

Symbols for primary destination

[A] : AAL (U.S.A) [S] : SAA (Australia)
[B] : BEAB (England) [U] : U/T (Universal Area)
[C] : CSA (Canada)
[E] : CEE (Europe) [V] : VDE (W. Germany)
[J] : JPN (Japan) [Y] : Custom Version

SP (Service Parts) Classification

These reference symbols correspond with component symbols in the Schematic Diagrams.

The available PC Board Blocks are listed separately.

5. When Part No. is known, Parts Index at end of Parts List can be used to locate where that part is shown in Parts List by its Reference No. listed at right of Part No.

WARNING

⚠ (*) INDICATES SAFETY CRITICAL COMPONENTS. FOR CONTINUED SAFETY, REPLACE SAFETY CRITICAL COMPONENTS ONLY WITH MANUFACTURE'S RECOMMENDED PARTS.

AVERTISSEMENT


⚠ (*) IL INDIQUE LES COMPOSANTS CRITIQUES DE SÉCURITÉ. POUR MAINTENIR LE DEGRÉ DE SÉCURITÉ DE L'APPAREIL, NE REMPLACER QUE DES PIÈCES RECOMMANDÉES PAR LE FABRICANT.

1.RECOMMENDED SPARE PARTS

We suggest you to stock the following Recommended Spare Part items listed below since they can cover most of the routine service.

Ref.No.	Part No.	Description	Ref.No.	Part No.	Description
1	AX-401055M	REMOCON RC-S630	63	ES-390620J	SW SLIDE SSSF 01-02N
2	BB-401096M	MECHA GAK-5PB-2			[DOLBY]
		[TAPE-1]	64	ES-394736J	SW TACT SOA-133HS
3	BB-403466M	MECHA GAK3603D			[INPUT SELLECTOR UP]
		[TAPE-2]	65	ES-394818J	SW TACT SOR-123HS T05
4	BM-729992J	MOTOR EG-530KD-2B			[REC PAUSE]
5	BM-729993J	MOTOR EG-530YD-2B	66	ET-732427M	DETECTOR NJL5165K
6	*BT-403288M	TRANS POW C1028-BS	67	ET-356336	TR DTA114ES
		[B.S]	68	ET-369248	TR DTA114YS
7	*BT-403287M	TRANS POW C1028-EV	69	ET-373382	TR DTA143ZS
		[E.V]	70	ET-354415	TR DTA144ES
8	*BT-403286M	TRANS POW C1028-U	71	ET-353897	TR DTC114ES
		[U]	72	ET-360399	TR DTC114TS
9	EC-389414J	C CE V DE7 B102K 400AC	73	ET-354365	TR DTC114YS
10	*EC-338496	C CE V DE7 FZ 472P 400AC	74	ET-354371	TR DTC124ES
11	EC-383075J	C CE V CUT SME 332M 35.0DC	75	ET-373392	TR DTC124XS
12	ED-394723J	D LED GL3HY44 YELLOW	76	ET-354364	TR DTC143TS
13	ED-405359J	D LED SEL2915A C,D ORANGE	77	ET-373391	TR DTC143ZS
14	ED-382365J	D LED SLR-34VC3F RED	78	ET-354414	TR DTC144ES
15	ED-394416J	D LED SLV-31VT3F RED	79	ET-394570J	TR 2SA1038 S T05
16	*ED-357036	D SILICON DBA20B-K15 100/ 2.0A	80	ET-353899	TR 2SA1317 S,T,U
17	ED-307572	D SILICON H 1SS131	81	ET-352726	TR 2SA1392 T,U
18	ED-624903	D SILICON H 1S2473	82	ET-400965J	TR 2SB1357 E,F T05
19	*ED-403291J	D SILICON RS403-SC51 200/ 4.0A	83	ET-394571J	TR 2SC2389 S,E T05
20	*ED-511907	D SILICON 1N4002 100/1.0A	84	ET-397160J	TR 2SC3330 R,S,T,U,V
21	ED-391003J	D ZENER H HZS4C3	85	ET-397152J	TR 2SC3382 T,U
22	ED-367520	D ZENER H HZS5.6B3J F05	86	ET-400741J	TR 2SC3708 T T05
23	ED-364033	D ZENER H HZS6.8B3J F05	87	ET-366581	TR 2SD1762 E,F
24	ED-346558	D ZENER H HZ12B1L	88	ET-401091J	TR 2SD2144S U,V,W T05
25	ED-346560	D ZENER H HZ12B3L	89	ET-396072J	TR 2SD2159 V,W
26	ED-346627	D ZENER H HZ33 2	90	EV-403297J	VR ROTARY RK11K1130 SP104
27	ED-307610	D ZENER H HZ7 A2			[BALANCE VR]
28	ED-346604	D ZENER H HZ7 B2	91	EV-403298J	VR SLIDE RS15H113D B104
29	*EF-359007	FUSE BET T 250V 1.25A	92	EV-403299J	VR SPL *C1028 B104X2
30	*EF-364518	FUSE BET T 250V 2.50A			[MAIN VR]
31	*EF-359086	FUSE BET T 250V 4.00A	93	HR-732436J	HEAD RP BLK HX-M800W
32	*EF-355374	FUSE BET T 250V 500MA	94	HR-732431M	HEAD RP MS15R-AA2N4
33	*EF-358641	FUSE BET T 250V 800MA	95	MB-732415M	CLUTCH BELT (C)
34	EI-367572	IC BA15218	96	MB-732454J	CLUTCH BELT (F)
35	EI-389322J	IC CXA1101P	97	MB-732416M	DRIVE BELT
36	EI-394572J	IC CXA1115BP	98	MB-732574J	DRIVE BELT
37	EI-394574J	IC LA2000	99	MP-732411J	PINCH ROLLER
38	EI-359053	IC LA3600	100	MP-732450J	PINCH ROLLER (L) ASSY
39	EI-393325J	IC M5218AP	101	MP-732449J	PINCH ROLLER (R) ASSY
40	EI-394569J	IC M66312P			
41	EI-401056J	IC PD0029			
42	EI-390594J	IC PD0052			
43	*EI-394709J	IC STK4142-2			
44	EI-302233	IC TC4051BP			
45	EI-200573	IC TC4053BP			
46	*EI-377101	IC UPC7805HF			
47	EI-394518J	IC UPD6376CX			
48	EI-403294J	IC UPD75112CW FX2DKA1-119			
49	EI-373957J	OSC CE CST4.19MGW 4.194MHZ			
50	EJ-394459J	SOCKET OPTICAL GP1F32R			
		[CD OPTICAL IN]			
51	EJ-394442J	SOCKET 52303-1211 12P			
		[CD JACK]			
52	EJ-394445J	SOCKET 52303-1411 14P			
		[TUNER JACK]			
53	*EO-394826J	COIL LF LF-2C			
54	EO-403296J	COIL OSC 1 C1028 100.0KHZ			
55	EO-356809	COIL TUN 1 100Z-121 100.00KHZ			
56	*EQ-394450J	RELAY POW DG12D1-Q(M) 12V			
		[U]			
57	*ER-328278	R FUSE H ERD2FC 1/4W 10R0G			
58	*ER-200746	R FUSE H ERD2FC 1/4W 1000G			
59	ES-732430M	SW LEAF LSA-1114F			
60	ES-732429M	SW LEAF LSA-1146-2AU			
61	ES-403293J	SW PUSH SPUL19310A 2-02-02S			
		[SURROUND SW]			
62	*ES-349070	SW SELECTOR YKS11-0002 02-4			
		[U]			

MECHA BLOCK

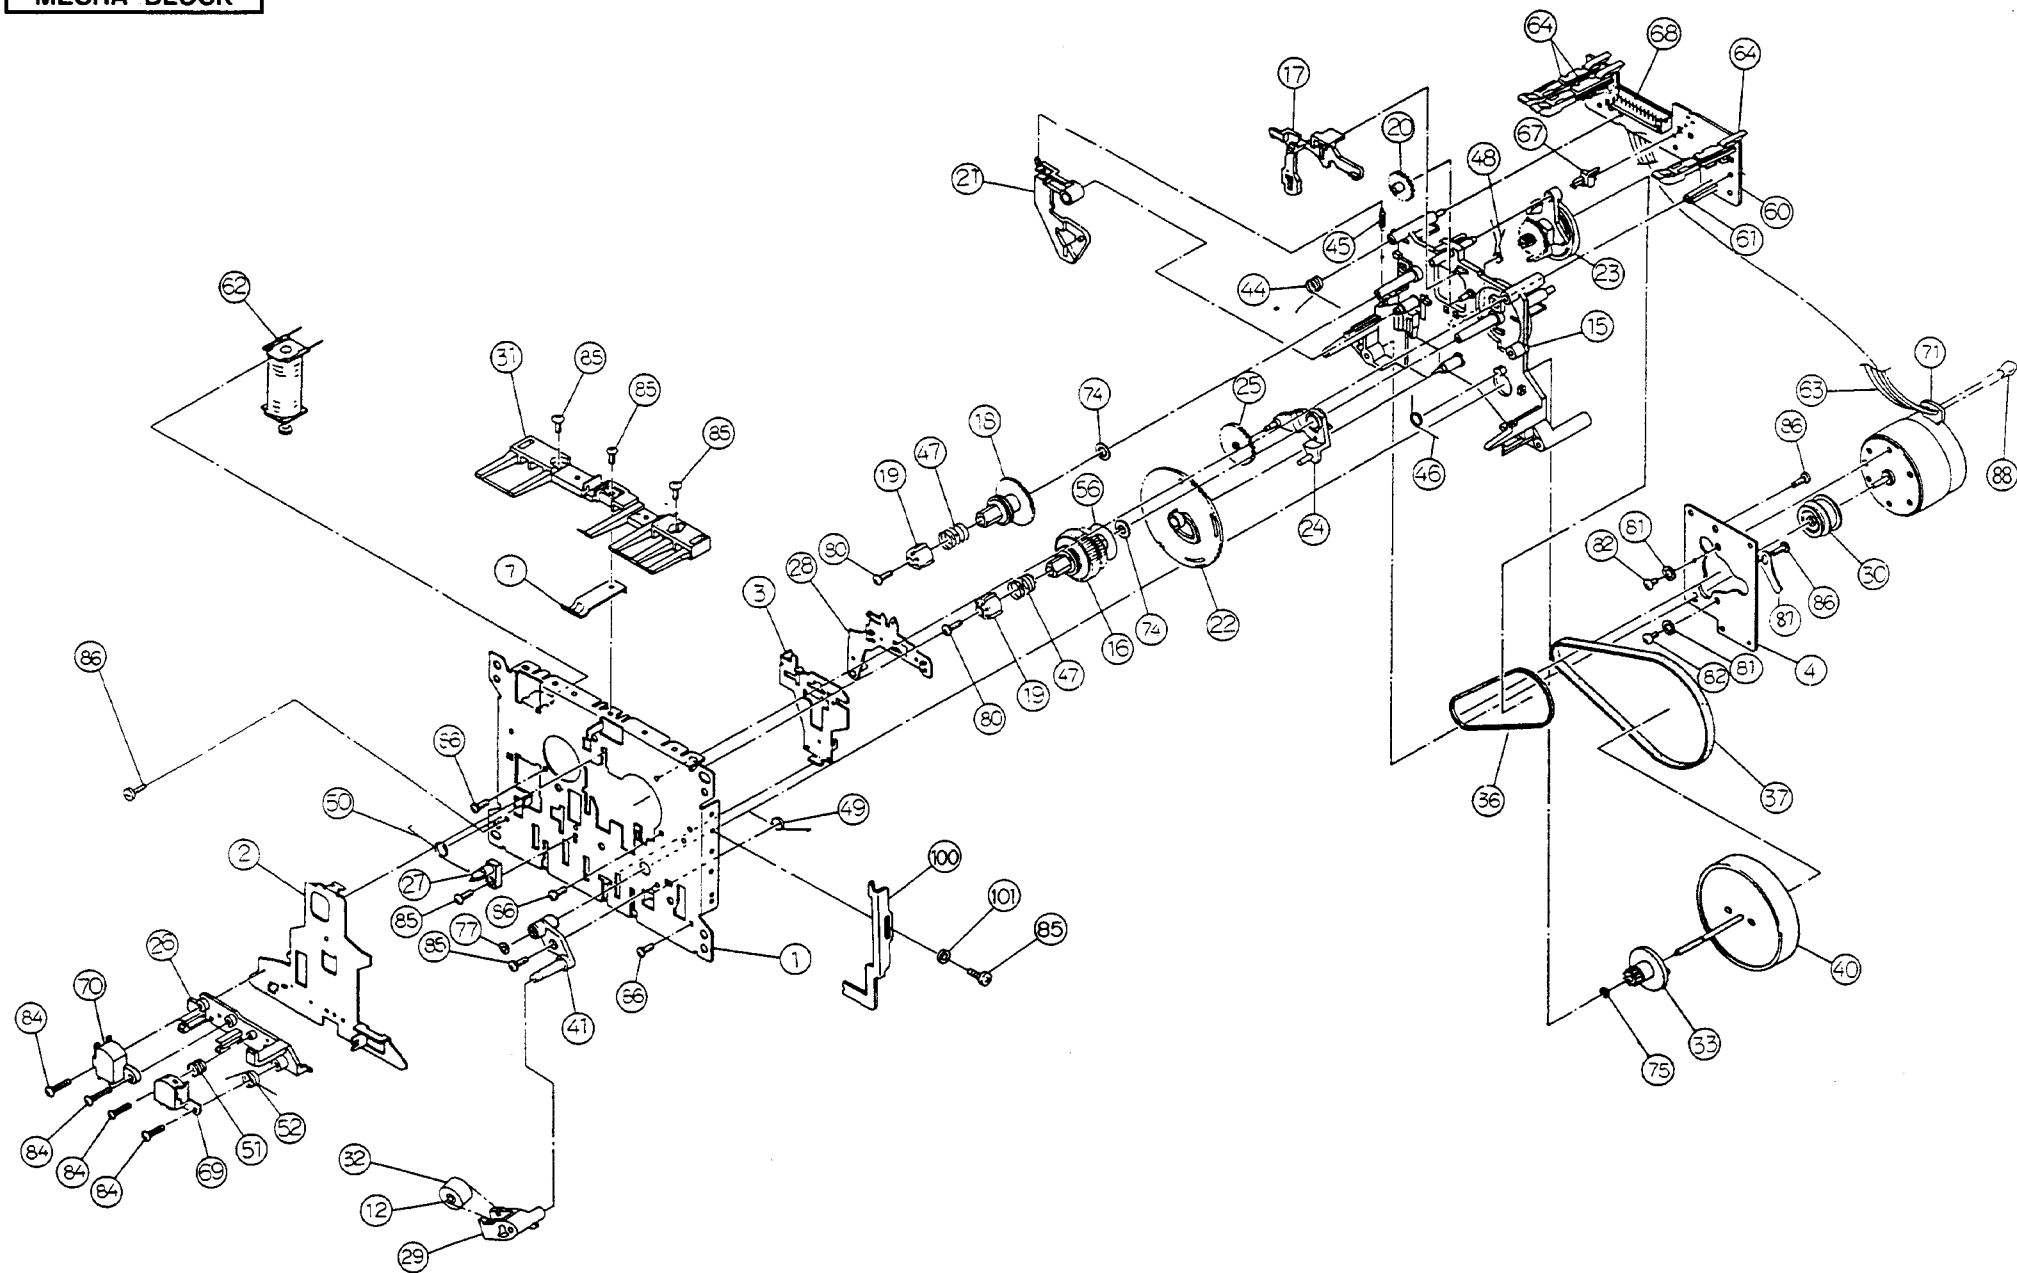

2. MECHA BLOCK


Ref.No.	Part No.	Description
7	ZG-732571M	PACK SPRING (M)
12	MS-732393M	P ROLLER SHAFT
16	MT-732394J	REEL ASSY (T)
17	ML-732395M	BRAKE ARM
18	MT-732396M	REEL (S)
19	MT-732397J	REEL CAP (B)
20	MZ-732398M	FF GEAR
22	MZ-732401J	PLAY CAM GEAR
23	MZ-732402J	CLUTCH ASSY
25	MZ-732404M	PLAY GEAR
26	HZ-732405J	HEAD BASE
30	ML-732409J	MOTOR PULLEY (C)
32	MP-732411J	PINCH ROLLER
33	MZ-732412M	FLYWHEEL GEAR
36	MB-732415M	CLUTCH BELT (C)
37	MB-732416M	DRIVE BELT
40	MI-732417M	FLYWHEEL
41	MV-732418J	HOUSING ASSY
47	ZG-732421M	REEL SPRING
51	ZG-726027J	SP HEAD (RP)

Ref.No.	Part No.	Description
52	ZG-732425M	P ROLLER SPRING
56	MZ-732426M	REFLECT SEAL
61	ET-732427M	DETECTOR NJL5165K
62	EP-732428M	SOLENOID ASSY
64	ES-732429M	SW LEAF LSA-1146-2AU
67	ES-732430M	SW LEAF LSA-1114F
69	HR-732431M	HEAD RP MS15R-AA2N4
70	HZ-732414M	DUMMY E HEAD LE100-C1
71	BM-729992J	MOTOR EG-530KD-2B
75	ZW-726629J	PSW21X040X025
77	ZW-725589J	PSW16X060X050
80	ZS-732434M	SCREW 1.7X6SPL
85	ZS-725379J	T2BID20X04

NOTE:

Parts will not be supplied if they are not listed in the parts list, even if they appear on the assembling illustrations with reference No.

MECHA BLOCK (REVERSE)

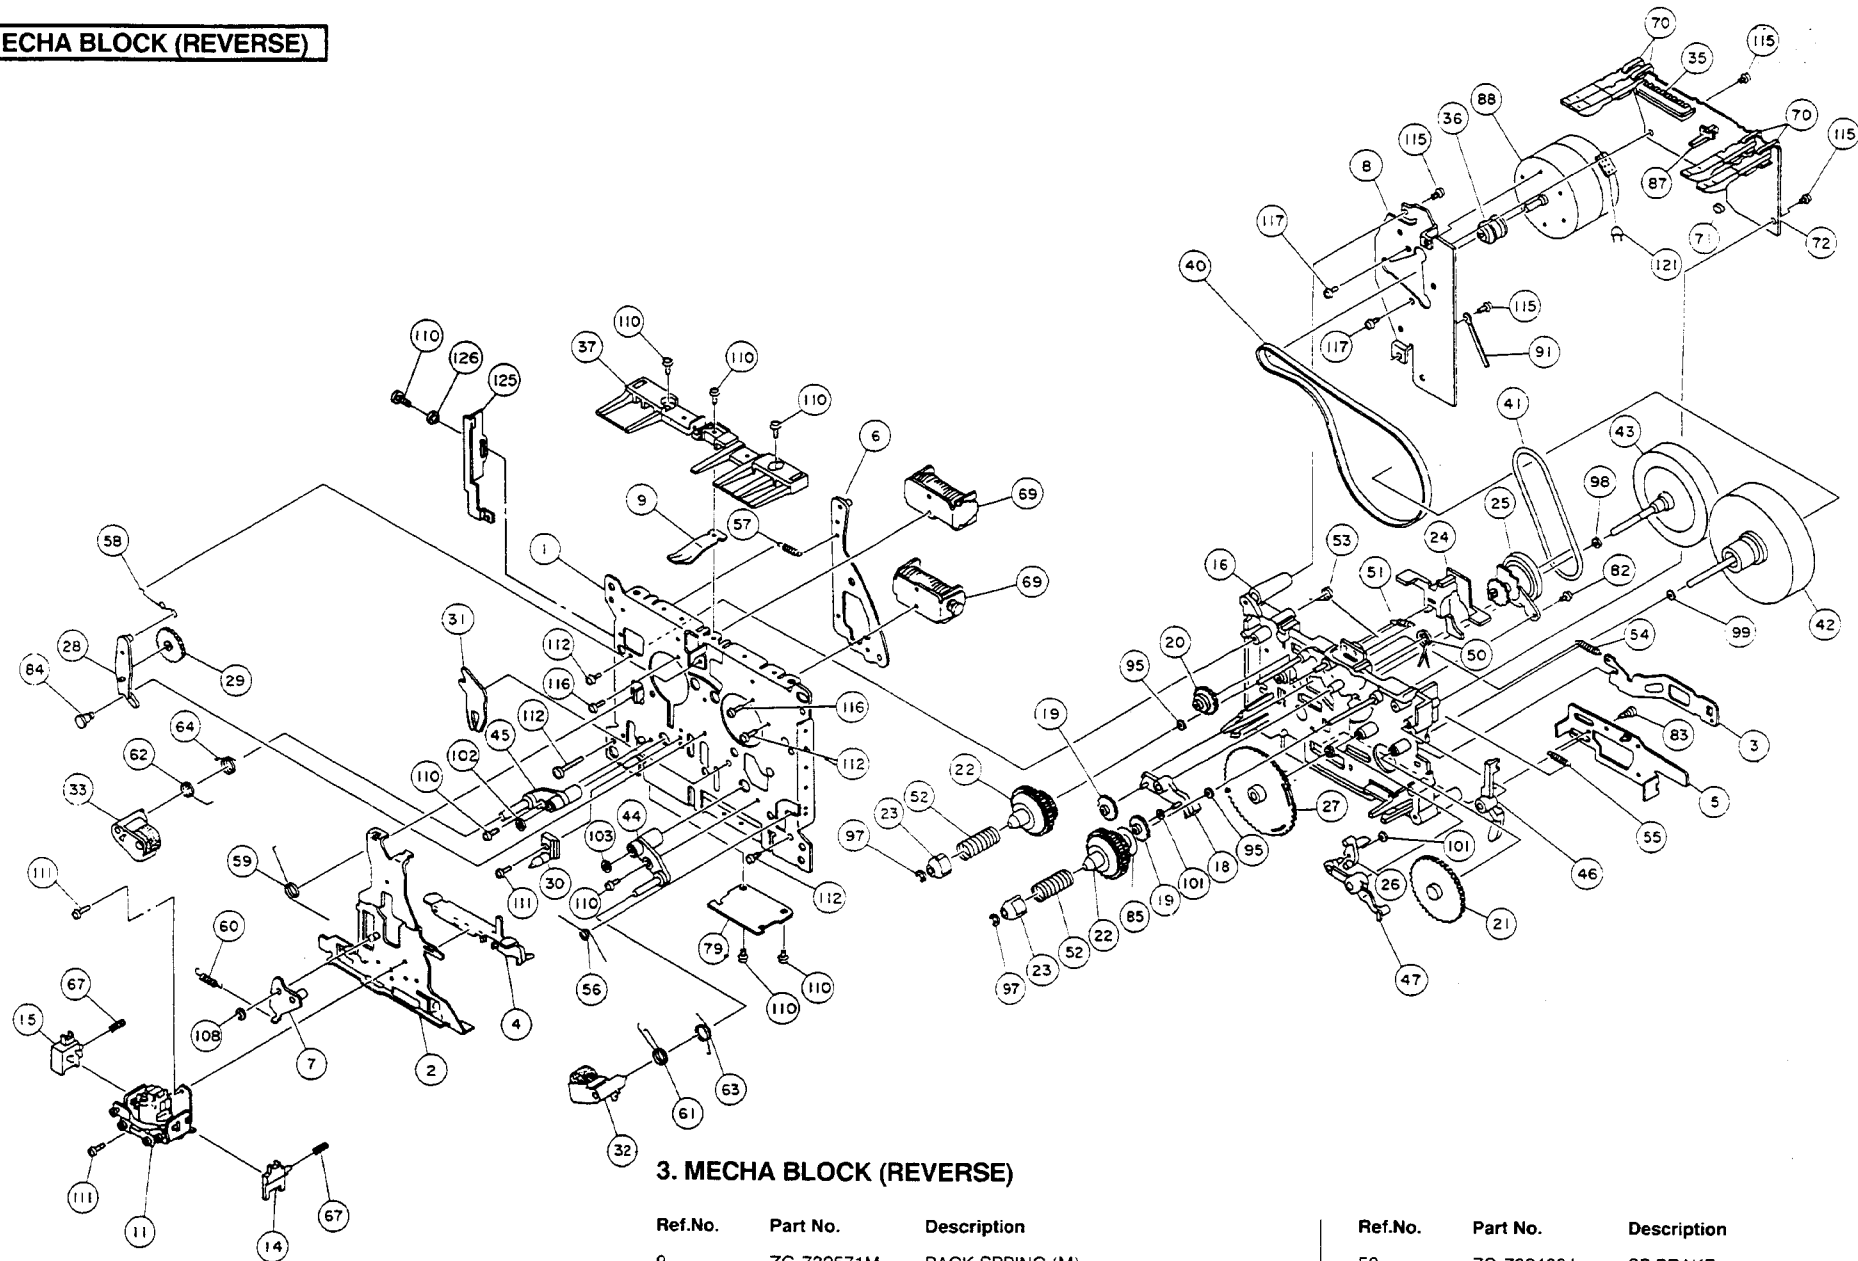

3. MECHA BLOCK (REVERSE)

Ref.No.	Part No.	Description
9	ZG-732571M	PACK SPRING (M)
11	HR-732436J	HEAD RP BLK HX-M800W
14	MS-732437J	TAPE GUIDE (R)
15	MS-732438J	TAPE GUIDE (L)
19	MZ-732439J	FR GEAR
20	MZ-732440J	REW GEAR
21	MZ-732441J	FR CAM GEAR
22	MT-732442J	REEL ASSY (G)
23	MT-732573J	REEL CAP (C)
24	ML-732444J	BRAKE ARM (B)
25	MZ-732445J	CLUTCH (B) ASSY
27	MZ-732446J	PL CAM GEAR (B)
29	MZ-732447J	PLAY GEAR
30	MS-732448J	CASSETTE GUIDE
32	MP-732449J	PINCH ROLLER (R) ASSY
33	MP-732450J	PINCH ROLLER (L) ASSY
36	MR-732452J	MOTOR PULLEY (F)
40	MB-732574J	DRIVE BELT
41	MB-732454J	CLUTCH BELT (F)
42	MI-732575J	FLYWHEEL (A) ASSY
43	MI-732576J	FLYWHEEL (B) ASSY
44	MV-732457J	HOUSING (R)
45	MV-732458J	HOUSING (L)
50	ZG-732459J	SP FR ARM (G)
51	ZG-732460J	SP FR ARM (B)
52	ZG-732461J	SP REEL (F)

Ref.No.	Part No.	Description
53	ZG-732462J	SP BRAKE
56	ZG-732463J	SP FR SHIFT
58	ZG-732464J	SP PLAY ARM
59	ZG-732465J	SP HEAD CHASSIS (B)
61	ZG-732466J	SP P-ROLLER (RA)
62	ZG-732467J	SP P-ROLLER (LA)
63	ZG-732468J	SP P-ROLLER ARM (RB)
64	ZG-732469J	SP P-ROLLER ARM (LB)
69	EP-732470J	SOLENOID ASSY (B)
70	ES-732429M	SW LEAF LSA-1146-2AU
71	ET-732427M	DETECTOR NJL5165K
85	MZ-732471J	REFLECT SEAL
88	BM-729993J	MOTOR EG-530YD-2B
95	ZW-726629J	PSW21X040X025
97	ZW-715984	PW16X035X050PSL
101	ZW-716206	PW17X035X025PSL
102	ZW-749818	WASHER 1.8X5.0X0.5NYL
103	ZW-749819	WASHER 2.1X7.0X0.5NYL
110	ZS-725379J	T2BD20X04
111	ZS-726632J	SCREW 20X05

NOTE:

Parts will not be supplied if they are not listed in the parts list, even if they appear on the assembling illustrations with reference No.

4. P.C BOARD

Ref.No.	Part No.	Description
1	BA-C1028A020A	PC(#) MAIN BLK AX-M430(U) [U,E]
2	BA-C1028A020B	PC(#) MAIN BLK AX-M430(V) [V,B,S]
3	BA-C1028A030A	PC PRE AMP BLK AX-M430(U) [U]
4	BA-C1028A030B	PC PRE AMP BLK AX-M430(E) [E,B,S]
5	BA-C1028A030C	PC PRE AMP BLK AX-M430(V) [V]
6	BA-C1028A040A	PC(#) GEQ BLK AX-M430

PC (#) MAIN BLK CONSISTS OF FOLLOWING P.C BOARD.

- MAIN P.C BOARD
- OPERATION P.C BOARD

PC (#) GEQ BLK CONSISTS OF FOLLOWING P.C BOARD.

- MAIN VR P.C BOARD
- POWER SW P.C BOARD

5. MAIN P.C BOARD

Ref.No.	Part No.	Description
C1	EC-389414J	C CE V DE7 B102K 400AC
C2	EC-383075J	C EC V CUT SME 332M 35.0DC
C3	EC-383075J	C EC V CUT SME 332M 35.0DC
C4	EC-389414J	C CE V DE7 B102K 400AC
C18	EC-389414J	C CE V DE7 B102K 400AC
C23	EC-389414J	C CE V DE7 B102K 400AC
D1	*ED-403291J	D SILICON RS403-SC51 200/ 4.0A
D2	*ED-511907	D SILICON 1N4002 100/1.0A
D3	*ED-511907	D SILICON 1N4002 100/1.0A
D4	*ED-511907	D SILICON 1N4002 100/1.0A
D5	*ED-511907	D SILICON 1N4002 100/1.0A
D6	ED-346560	D ZENER H HZ12B3L
D7	ED-346558	D ZENER H HZ12B1L
D8	*ED-511907	D SILICON 1N4002 100/1.0A
D9	*ED-511907	D SILICON 1N4002 100/1.0A
D10	*ED-511907	D SILICON 1N4002 100/1.0A
D11	ED-346627	D ZENER H HZ33 2
D12	*ED-511907	D SILICON 1N4002 100/1.0A
D13	*ED-511907	D SILICON 1N4002 100/1.0A
D14	ED-307610	D ZENER H HZ7 A2
D15	ED-624903	D SILICON H 1S2473
D16	ED-624903	D SILICON H 1S2473
D17	ED-624903	D SILICON H 1S2473
D18	ED-624903	D SILICON H 1S2473
D19	*ED-357036	D SILICON DBA20B-K15 100/ 2.0A
D20	ED-624903	D SILICON H 1S2473
D21	ED-346560	D ZENER H HZ12B3L
D22	ED-346604	D ZENER H HZ7 B2
D23	*ED-511907	D SILICON 1N4002 100/1.0A
D24	*ED-511907	D SILICON 1N4002 100/1.0A
D25	ED-624903	D SILICON H 1S2473
FR14	*ER-200746	R FUSE H ERD2FC 1/4W 1000G
FR15	*ER-200746	R FUSE H ERD2FC 1/4W 1000G
FR24	*ER-328278	R FUSE H ERD2FC 1/4W 10R0G
FR35	*ER-328278	R FUSE H ERD2FC 1/4W 10R0G
IC1	*EI-394709J	IC STK4142-2
IC2	*EI-377101	IC UPC7805HF
J1	EJ-366675	PHONE J HLJ4318-3040 [HEADPHONE JACK]
J2	EJ-394445J	SOCKET 52303-1411 14P [TUNER JACK]
J3	EJ-394442J	SOCKET 52303-1211 12P [CD JACK]
L1	EO-337880	COIL FIX 2 202AK-018 2R2K
L2	EO-337880	COIL FIX 2 202AK-018 2R2K
L3	EO-342936	COIL BALUM [V.B.S]
L4	EO-342936	COIL BALUM [V.B.S]
R28	ER-397193J	R OMF V T05 FS 1W 100J
R29	ER-397193J	R OMF V T05 FS 1W 100J
R40	ER-397193J	R OMF V T05 FS 1W 100J
R41	ER-397193J	R OMF V T05 FS 1W 100J

Ref.No.	Part No.	Description
SW1	ES-403293J	SW PUSH SPUL19310A 2-02-02S [SURROUND SW]
TM1	EJ-394712J	TERMINAL T5980 8P [SPEAKER TERMINAL]
TR1	ET-366581	TR 2SD1762 E.F
TR2	ET-397152J	TR 2SC3382 T.U
TR3	ET-400965J	TR 2SB1357 E.F T05
TR4	ET-400965J	TR 2SB1357 E.F T05
TR5	ET-397152J	TR 2SC3382 T.U
TR6	ET-353899	TR 2SA1317 S.T,U
TR7	ET-353899	TR 2SA1317 S.T,U
TR8	ET-366581	TR 2SD1762 E.F
TR9	ET-397160J	TR 2SC3330 R.S.T,U,V
TR10	ET-373392	TR DTC124XS
TR11	ET-354371	TR DTC124ES
TR12	ET-354414	TR DTC144ES
TR13	ET-356336	TR DTA114ES
TR14	ET-373382	TR DTA143ZS
TR15	ET-401091J	TR 2SD2144S U,V,W T05
TR16	ET-401091J	TR 2SD2144S U,V,W T05
TR17	ET-354365	TR DTC114YS
F1	*EF-359086	FUSE BET T 250V 4.00A
F2	*EF-359086	FUSE BET T 250V 4.00A
F3	*EF-355374	FUSE BET T 250V 500MA
F4	*EF-355374	FUSE BET T 250V 500MA
F5	*EF-359007	FUSE BET T 250V 1.25A
F6	*EF-358641	FUSE BET T 250V 800MA
F7	*EF-358641	FUSE BET T 250V 800MA
F8	*EF-364518	FUSE BET T 250V 2.50A
F9	*EF-364518	FUSE BET T 250V 2.50A

6. OPERATION P.C BOARD

Ref.No.	Part No.	Description
D101	ED-624903	D SILICON H 1S2473
D102	ED-624903	D SILICON H 1S2473
D103	ED-624903	D SILICON H 1S2473
D104	ED-624903	D SILICON H 1S2473
D105	ED-624903	D SILICON H 1S2473
D106	ED-624903	D SILICON H 1S2473
D107	ED-624903	D SILICON H 1S2473
D108	ED-624903	D SILICON H 1S2473
D109	ED-624903	D SILICON H 1S2473
D110	ED-624903	D SILICON H 1S2473
D111	ED-382365J	D LED SLR-34VC3F RED
D112	ED-394723J	D LED GL3HY44 YELLOW
D113	ED-394723J	D LED GL3HY44 YELLOW
D114	ED-382365J	D LED SLR-34VC3F RED
D115	ED-382365J	D LED SLR-34VC3F RED
D116	ED-394723J	D LED GL3HY44 YELLOW
D117	ED-394723J	D LED GL3HY44 YELLOW
D118	ED-394723J	D LED GL3HY44 YELLOW
D119	ED-394723J	D LED GL3HY44 YELLOW
IC101	EI-394569J	IC M66312P
SW101	ES-390620J	SW SLIDE SSSF 01-02N [DOLBY]
TR101	ET-373382	TR DTA143ZS
TS101	ES-394818J	SW TACT SOR-123HS T05 [REC PAUSE]
TS102	ES-394818J	SW TACT SOR-123HS T05 [REW]
TS103	ES-394818J	SW TACT SOR-123HS T05 [REV]
TS104	ES-394818J	SW TACT SOR-123HS T05 [STOP]
TS105	ES-394818J	SW TACT SOR-123HS T05 [DUBBING X1]
TS106	ES-394818J	SW TACT SOR-123HS T05 [AUTO MUTE]
TS107	ES-394818J	SW TACT SOR-123HS T05 [FF]
TS108	ES-394818J	SW TACT SOR-123HS T05 [FWD]
TS109	ES-394818J	SW TACT SOR-123HS T05 [OPERATION TAPE 1/2]
TS110	ES-394818J	SW TACT SOR-123HS T05 [DUBBING X2]

7. PRE AMP P.C BOARD

Ref.No.	Part No.	Description
C142	*EC-338496	C CE V DE7 FZ 472P 400AC
C143	*EC-338496	C CE V DE7 FZ 472P 400AC
C144	*EC-389414J	C CE V DE7 B102K 400AC
D1	ED-364033	D ZENER H HZS6.8B3J F05
D2	ED-364033	D ZENER H HZS6.8B3J F05
D3	ED-307572	D SILICON H 1SS131
D4	ED-307572	D SILICON H 1SS131
D5	ED-624903	D SILICON H 1S2473
D6	ED-307572	D SILICON H 1SS131
D7	ED-367520	D ZENER H HZS5.6B3J F05
D8	ED-307572	D SILICON H 1SS131
D9	ED-624903	D SILICON H 1S2473
D10	ED-624903	D SILICON H 1S2473
D11	ED-307572	D SILICON H 1SS131
D12	ED-307572	D SILICON H 1SS131
D13	ED-307572	D SILICON H 1SS131
D14	ED-307572	D SILICON H 1SS131
D15	ED-307572	D SILICON H 1SS131
D16	ED-307572	D SILICON H 1SS131
D17	ED-307572	D SILICON H 1SS131
D18	ED-391003J	D ZENER H HZS4C3
D19	ED-511907	D SILICON 1N4002 100/1.0A
D20	ED-307572	D SILICON H 1SS131
D21	ED-511907	D SILICON 1N4002 100/1.0A
D22	ED-511907	D SILICON 1N4002 100/1.0A
D23	ED-511907	D SILICON 1N4002 100/1.0A
D24	ED-307572	D SILICON H 1SS131
D25	ED-307572	D SILICON H 1SS131
D26	ED-307572	D SILICON H 1SS131
D27	ED-307572	D SILICON H 1SS131
D28	ED-624903	D SILICON H 1S2473
D29	ED-307572	D SILICON H 1SS131
D30	ED-307572	D SILICON H 1SS131
D31	ED-307572	D SILICON H 1SS131
D32	ED-624903	D SILICON H 1S2473
D33	ED-624903	D SILICON H 1S2473
D34	ED-307572	D SILICON H 1SS131
D35	ED-307572	D SILICON H 1SS131
D36	ED-307572	D SILICON H 1SS131
D37	ED-307572	D SILICON H 1SS131
D38	ED-624903	D SILICON H 1S2473
D39	ED-307572	D SILICON H 1SS131
FL1	EO-356809	COIL TUN 1 100Z-121 100.00KHZ
FL2	EO-356809	COIL TUN 1 100Z-121 100.00KHZ
FL3	EO-356809	COIL TUN 1 100Z-121 100.00KHZ
FL4	EO-356809	COIL TUN 1 100Z-121 100.00KHZ
FL5	*EO-394826J	COIL LF LF-2C
L1	EO-403342J	COIL FIX 1 LAP02 F05 4R7K
L2	EO-403342J	COIL FIX 1 LAP02 F05 4R7K
L3	EO-403342J	COIL FIX 1 LAP02 F05 4R7K
L4	EO-403342J	COIL FIX 1 LAP02 F05 4R7K
L5	EO-354600	COIL FIX 1 LAP02 F05 101K
L6	EO-403304J	COIL FIX 3 E1392T822J 822J392K
L7	EO-403304J	COIL FIX 3 E1392T822J 822J392K
IC1	EI-367572	IC BA15218
IC2	EI-302233	IC TC4051BP
IC3	EI-302233	IC TC4051BP
IC4	EI-367572	IC BA15218
IC5	EI-200573	IC TC4053BP
IC6	EI-390594J	IC PD0052
IC7	EI-401056J	IC PD0029
IC8	EI-394518J	IC UPD6376CX
IC9	EI-393325J	IC M5218AP
IC10	EI-394572J	IC CXA1115BP
IC11	EI-394574J	IC LA2000
IC12	EI-389322J	IC CXA1101P
IC13	EI-367572	IC BA15218
IC14	EI-403294J	IC UPD75112CW FX2DKA1-119
J1	EJ-394459J	SOCKET OPTICAL GP1F32R
J2	EJ-403295J	[CD OPTICAL IN]
		PIN J 'C1028 W/SHIELD 6P
		[PHONO/AUX JACK]

Ref.No.	Part No.	Description
RL1	*EQ-394450J	RELAY POW DG12D1-O(M) 12V
T1	EO-403296J	[U]
TM1	*EJ-394711J	COIL OSC 1 C1028 100.0KHZ
		SOCKET OUT M7039-A 1P
		[U] [AC OUTLET]
TR1	ET-352726	TR 2SA1392 T.U
TR2	ET-397160J	TR 2SC3330 R.S.T.U.V
TR3	ET-397160J	TR 2SC3330 R.S.T.U.V
TR4	ET-397160J	TR 2SC3330 R.S.T.U.V
TR5	ET-397160J	TR 2SC3330 R.S.T.U.V
TR6	ET-353897	TR DTC114ES
TR7	ET-354415	TR DTA144ES
TR8	ET-354414	TR DTC144ES
TR9	ET-356336	TR DTA114ES
TR10	ET-354414	TR DTC144ES
TR11	ET-397160J	TR 2SC3330 R.S.T.U.V
TR12	ET-360399	TR DTC114TS
TR13	ET-360399	TR DTC114TS
TR14	ET-354364	TR DTC143TS
TR15	ET-354364	TR DTC143TS
TR16	ET-397160J	TR 2SC3330 R.S.T.U.V
TR17	ET-397160J	TR 2SC3330 R.S.T.U.V
TR18	ET-356336	TR DTA114ES
TR19	ET-353897	TR DTC114ES
TR20	ET-353897	TR DTC114ES
TR21	ET-369248	TR DTA114YS
TR22	ET-373392	TR DTC124XS
TR23	ET-360399	TR DTC114TS
TR24	ET-373392	TR DTC124XS
TR25	ET-373392	TR DTC124XS
TR26	ET-373392	TR DTC124XS
TR27	ET-356336	TR DTA114ES
TR28	ET-373392	TR DTC124XS
TR29	ET-394570J	TR 2SA1038 S T05
TR30	ET-366581	TR 2SD1762 E.F
TR31	ET-397160J	TR 2SC3330 R.S.T.U.V
TR32	ET-397160J	TR 2SC3330 R.S.T.U.V
TR33	ET-397160J	TR 2SC3330 R.S.T.U.V
TR34	ET-397160J	TR 2SC3330 R.S.T.U.V
TR35	ET-354364	TR DTC143TS
TR36	ET-354364	TR DTC143TS
TR37	ET-354364	TR DTC143TS
TR38	ET-354364	TR DTC143TS
TR39	ET-354364	TR DTC143TS
TR40	ET-354364	TR DTC143TS
TR41	ET-394571J	TR 2SC2389 S.E T05
TR42	ET-394571J	TR 2SC2389 S.E T05
TR43	ET-394571J	TR 2SC2389 S.E T05
TR44	ET-394571J	TR 2SC2389 S.E T05
TR45	ET-397160J	TR 2SC3330 R.S.T.U.V
TR46	ET-397160J	TR 2SC3330 R.S.T.U.V
TR47	ET-397160J	TR 2SC3330 R.S.T.U.V
TR48	ET-397160J	TR 2SC3330 R.S.T.U.V
TR49	ET-397160J	TR 2SC3330 R.S.T.U.V
TR50	ET-397160J	TR 2SC3330 R.S.T.U.V
TR51	ET-397160J	TR 2SC3330 R.S.T.U.V
TR52	ET-397160J	TR 2SC3330 R.S.T.U.V
TR53	ET-354365	TR DTC114YS
TR54	ET-354365	TR DTC114YS
TR55	ET-373391	TR DTC143ZS
TR56	ET-397160J	TR 2SC3330 R.S.T.U.V
TR57	ET-397160J	TR 2SC3330 R.S.T.U.V
TR58	ET-397160J	TR 2SC3330 R.S.T.U.V
TR59	ET-360399	TR DTC114TS
TR60	ET-400741J	TR 2SC3708 T T05
TR61	ET-400741J	TR 2SC3708 T T05
TR62	ET-354414	TR DTC144ES
TR63	ET-397160J	TR 2SC3330 R.S.T.U.V
TR64	ET-353899	TR 2SA1317 S.T.U
TR65	ET-356336	TR DTA114ES
TR66	ET-356336	TR DTA114ES
TR67	ET-396072J	TR 2SD2159 V.W
TR68	ET-396072J	TR 2SD2159 V.W
TR69	ET-396072J	TR 2SD2159 V.W
TR70	ET-396072J	TR 2SD2159 V.W
TR71	ET-397160J	TR 2SC3330 R.S.T.U.V
TR72	ET-353899	TR 2SA1317 S.T.U
TR73	ET-397160J	TR 2SC3330 R.S.T.U.V
TR74	ET-397160J	TR 2SC3330 R.S.T.U.V
TR75	ET-354414	TR DTC144ES

Ref.No.	Part No.	Description
TR76	ET-354414	TR DTC144ES
TR77	ET-354414	TR DTC144ES [U]
TR78	ET-397160J	TR 2SC3330 R,S,T,U,V [U]
TR79	ET-373392	TR DTC124XS
TR80	ET-356336	TR DTA114ES
TR81	ET-354364	TR DTC143TS
TR82	ET-354364	TR DTC143TS
TR83	ET-354364	TR DTC143TS
TR84	ET-353897	TR DTC114ES
TR85	ET-353897	TR DTC114ES
TR86	ET-360399	TR DTC114TS
TR87	ET-353897	TR DTC114ES
VR1	EV-394561J	R S-FIX H V8K4-11(1S) 0.10W102
VR2	EV-355380	R S-FIX H V8K4-11(1S) 0.10W202
VR3	EV-367524	R S-FIX H V8K4-11(1S) 0.10W501
VR4	EV-394561J	R S-FIX H V8K4-11(1S) 0.10W102
X1	EI-373957J1	OSC CE CST4.19MGW 4.194MHZ
F101	*EF-359007	FUSE BET T 250V 1.25A [U]
F102	*EF-359007	FUSE BET T 250V 1.25A [U]

8. GEQ P.C BOARD

Ref.No.	Part No.	Description
D1	ED-394416J	D LED SLV-31VT3F RED
D2	ED-394416J	D LED SLV-31VT3F RED
D3	ED-394416J	D LED SLV-31VT3F RED
D4	ED-394416J	D LED SLV-31VT3F RED
D5	ED-405359J	D LED SEL2915A C,D ORANGE
D6	ED-405359J	D LED SEL2915A C,D ORANGE
D7	ED-405359J	D LED SEL2915A C,D ORANGE
D8	ED-405359J	D LED SEL2915A C,D ORANGE
D9	ED-405359J	D LED SEL2915A C,D ORANGE
D10	ED-405359J	D LED SEL2915A C,D ORANGE
D11	ED-307572	D SILICON H 1SS131
D12	ED-307572	D SILICON H 1SS131
D13	ED-307572	D SILICON H 1SS131
D14	ED-405359J	D LED SEL2915A C,D ORANGE
IC1	EI-359053	IC LA3600
IC2	EI-359053	IC LA3600
TR1	ET-354414	TR DTC144ES
TR2	ET-356336	TR DTA114ES
TR3	ET-397160J	TR 2SC3330 R,S,T,U,V
TR4	ET-397160J	TR 2SC3330 R,S,T,U,V
TR5	ET-373382	TR DTA143ZS
TR6	ET-373382	TR DTA143ZS
TR7	ET-373382	TR DTA143ZS
TR8	ET-373382	TR DTA143ZS
TR9	ET-373382	TR DTA143ZS
TR10	ET-373382	TR DTA143ZS
TR11	ET-373382	TR DTA143ZS
TR12	ET-373382	TR DTA143ZS
TS1	ES-394736J	SW TACT SOA-133HS [INPUT SELECTOR UP]
TS2	ES-394736J	SW TACT SOA-133HS [INPUT SELLECTOR DOWN]
VR1	EV-403298J	VR SLIDE RS15H113D B104
VR2	EV-403298J	VR SLIDE RS15H113D B104
VR3	EV-403298J	VR SLIDE RS15H113D B104
VR4	EV-403298J	VR SLIDE RS15H113D B104
VR5	EV-403298J	VR SLIDE RS15H113D B104
VR6	EV-403298J	VR SLIDE RS15H113D B104
VR7	EV-403298J	VR SLIDE RS15H113D B104
VR8	EV-403298J	VR SLIDE RS15H113D B104
VR9	EV-403298J	VR SLIDE RS15H113D B104
VR10	EV-403298J	VR SLIDE RS15H113D B104
VR11	EV-403297J	VR ROTARY RK11K1130 SP104 [BALANCE VR]


9. MAIN VR P.C BOARD

Ref.No.	Part No.	Description
TR51	ET-353899	TR 2SA1317 S,T,U
TR52	ET-353899	TR 2SA1317 S,T,U
TR53	ET-397160J	TR 2SC3330 R,S,T,U,V
TR54	ET-397160J	TR 2SC3330 R,S,T,U,V
VR51	EV-403299J	VR SPL *C1028 B104X2 [MAIN VR]

10. POWER SW P.C BOARD

Ref.No.	Part No.	Description
TS3	ES-394736J	SW TACT SOA-133HS [POWER SW]

FINAL ASSEMBLY

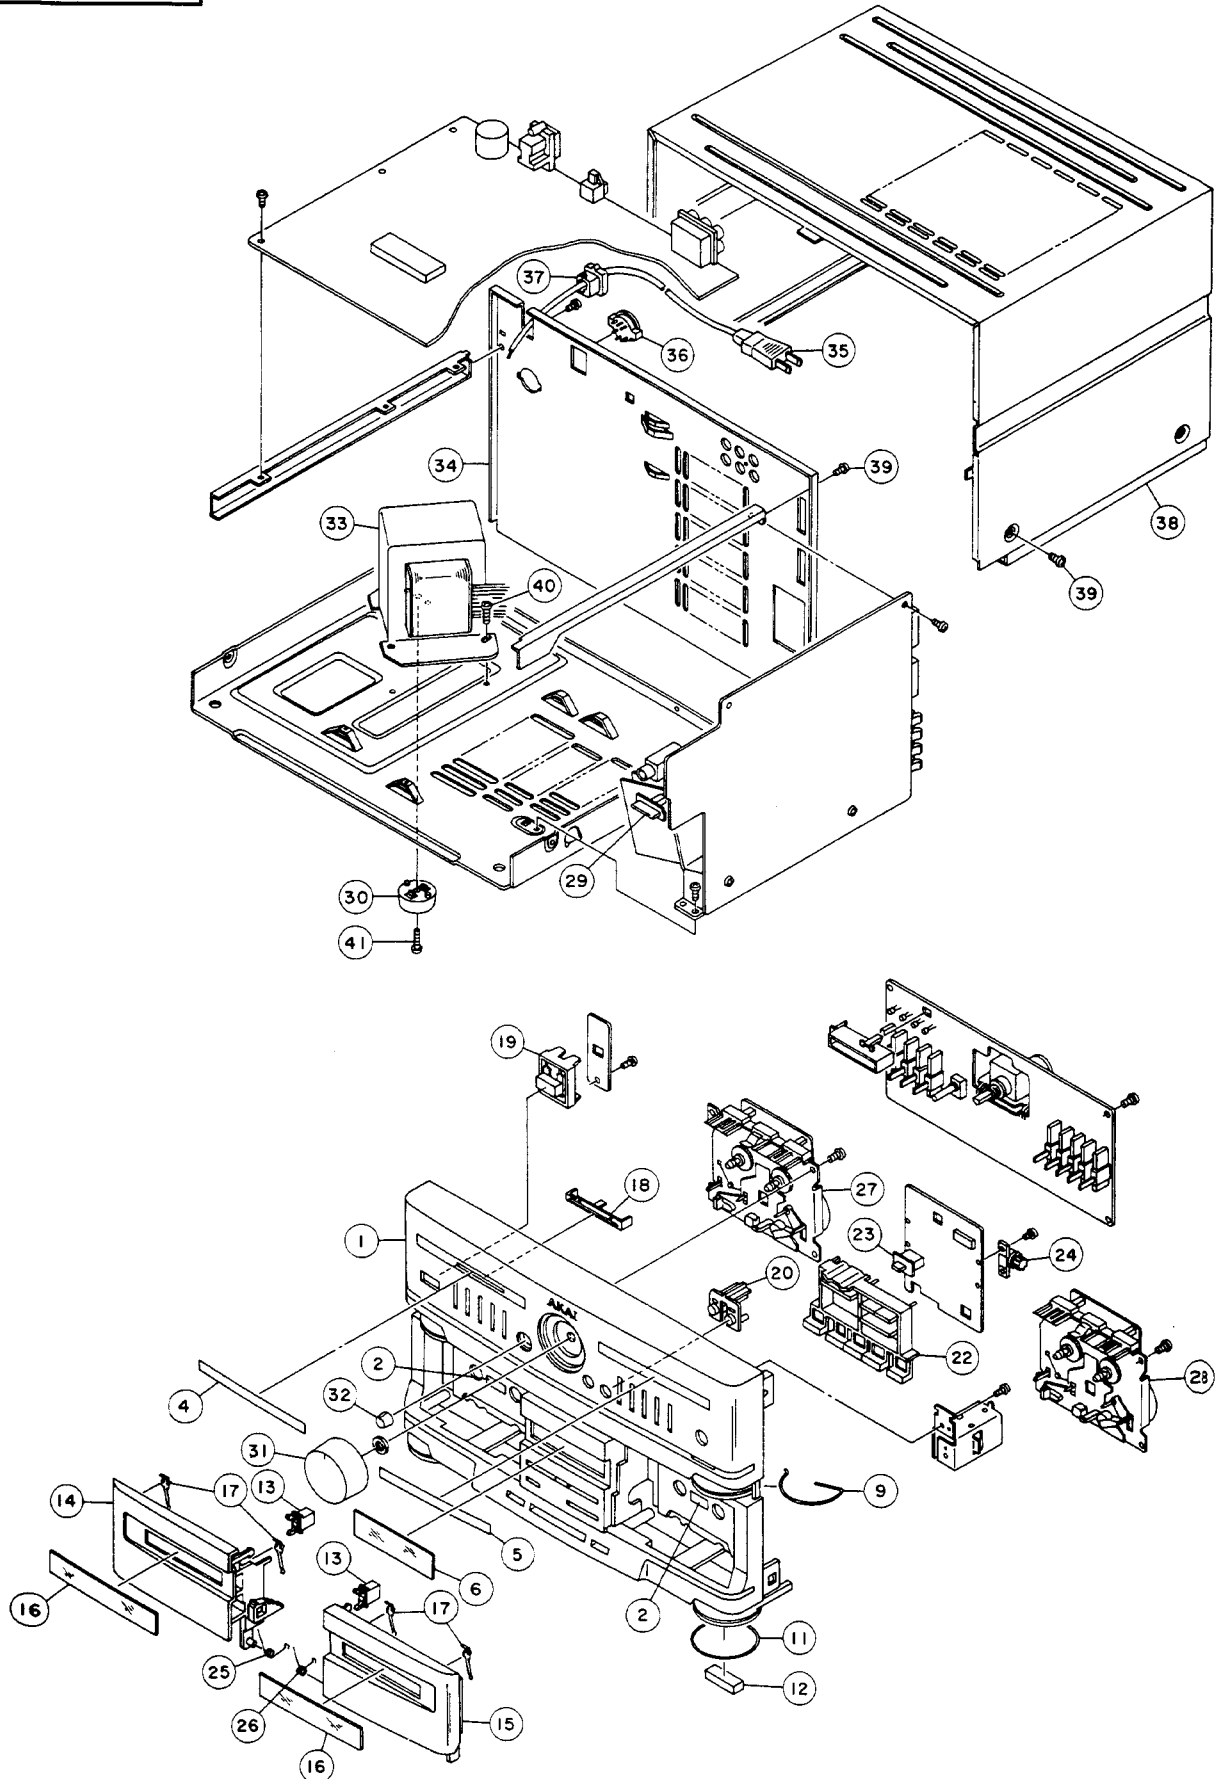

ABBREVIATIONS (AMPLIFIER)

11. FINAL ASSEMBLY

Ref.No.	Part No.	Description
1	SP-402680M	PANEL FRONT
2	SE-394092M	REFLECTOR
4	SE-402675M	WINDOW(L)
5	SE-402676M	WINDOW(R)
6	SE-402673M	PLATE ORNAMENT-AX
9	SZ-402677M	RING FOOT AX
11	SZ-401762M	RING FOOT
12	SA-394136M	CUSHION FOOT
13	SZ-401094J	PUSH CATCH 3Y18
14	SC-402679M	LID PANEL(L)-X
15	SC-402678M	LID PANEL(R)-X
16	SE-401847M	PLATE WINDOW
17	ZG-406105M	SP PLATE CASSETTE HOLDER(2)
18	SE-394119M	LENS OPTICAL
19	SK-401821M	BUTTON POWER
20	SK-402672M	BUTTON SELECT
22	SK-401862M	BUTTON OPERATION
23	SK-394084M	KNOB SLIDE
24	MZ-380875J	DAMPER 1G88-L
25	ZG-401852M	SP TORSION EJECT(L)
26	ZG-401853M	SP TORSION EJECT(R)
27	BB-401096M	MECHA GAK-5PB-2 [TAPE-1]
28	BB-403466M	MECHA GAK3603D [TAPE-2]
29	SK-402670M	BUTTON SURROUND
30	SA-394127M1	FOOT REAR
31	SK-401829M	KNOB VR
32	SK-402674M	KNOB BALANCE
33A	*BT-403286M	TRANS POW C1028-U [U]
33B	*BT-403287M	TRANS POW C1028-EV [E.V]
33C	*BT-403288M	TRANS POW C1028-BS [B.S]
34A	SP-402666M	PANEL REAR AX-M430(U)
34B	SP-402667M	PANEL REAR AX-M430(E)
34C	SP-402669M	PANEL REAR AX-M430(V)
34D	SP-402668M	PANEL REAR AX-M430(B,S)
35A	*EW-374894	AC CORD 2C VM-0129A,VFF U/T [U]
35B	*EW-347897	AC CORD 2 CORES VM0364,LCFL EV [E.V]
35C	*EW-346249	AC CORD 2 CORES LCFL2X0.75 B [B]
35D	*EW-347898	AC CORD 2 CORES VM-0436,LCFL S [S]
36	*ES-349070	SW SELECTOR YKS11-0002 02-4 [U]
37	*EZ-371605	BUSH CORD 2271
38	SC-390588M	COVER UPPER
39	ZS-308846	T2BR30X08STL BZN PROJECTION
40	ZS-346742	ST BID40X08STL CMT CUP
41	ZS-447805	T2BR30X12STL CMT

NOTE:

Parts will not be supplied if they are not listed in the parts list, even if they appear on the assembling illustrations with reference No.

12. ACCESSARY

Ref.No.	Part No.	Description
1	AX-401055M	REMOCON RC-S630

ABBREVIATION	EXPLANATION
A	Analog
AC	Alternating Current
AMP	AMPlifier
CD	Compact Disc
COM	COMmon
D	Digital
D/A	Digital to Analog
DAC	Digital to Analog Converter
DAT	Digital Audio Tape recorder
DC	Direct Current
GND	GrouND
L	Left
LED	Light Emitting Diode
MC	Moving Coil
MM	Moving Magnet
PCB	Printed Circuit Board
R	Right
REG	REGulator
REC	RECord
TR	TRansistor
SW	SWitch
V.AMP	Voltage AMPlifier
V.DISC	Video DISC
VR	Variable Resistance
VTR	Video Tape Recorder

ABBREVIATIONS (CASSETTE)

ABBREVIATION	EXPLANATION	ABBREVIATION	EXPLANATION
AC	Alternating Current	MIN	MINute
A/D	Analog/Digital	MML	Maximum Modulation Level
AF	Auto Fader	MOL	Maximum Output Level
AMP	AMPLifier	MPX	Multi PleX
AR	Anti Recording	NC	Not Connected (No Connection)
AT BIAS	Auto Turning BIAS	NFB	Negative Feed Back
ATT	ATTenuator	NORM	NORMAL
BAL	BALance	NR	Noise Reduction
BEF	Band Elimination Filter	OSC	OSCillator (OSCillation)
BSS	Blank Search System	P	Pulse
CAP M	CAPstan Motor	PB	Play Back
CH	CHannel	QMSS	Quick Memory Search System
COMP	COMParator	QR	Quick Reverse
CONT	CONTinuance	R CH	Right CHannel
CRLP	Computer Recording Level Processing	REC	RECORD (RECORDing)
CS	Chip Select	REV	REVerse
D/A	Digital/Analog	ROT	ROTation
DC	Direct Current	REW	REWind
DET	DETECTOR	SEC	SECOnd
DISCRI	DISCRIminator	SELE	SELEctor
DUB	DUBbing	SENS	SENSitivity
EQ	EQUALizer	SEPP	Single Ended Push Pull
FF (or F.FWD)	Fast Foward	SIG	SIGNal
FLD	FLUorescent Display	SPECT	SPECTrum
FREQ	FREQUENCY	STD	STANDARD
FWD	ForWARD	SW	SWitch
GND	GrouND	SYSCON	SYStem CONtrol
H	High	TP	Test Point
HPF	High Pass Filter	TRIG	TRIGa
IND	INDicator	VCA	Voltage Control Attenuator
IPLS	Instant Program Location System	VOL	VOLUME
L	Low	VOLT	VOLTage
L CH	Left CHannel	VR	Variable Resistor
LED	Light Emitting Diode	X'TAL	cysTAL
MEMO	MEMOry	X1	Normal speed
MICOM	MicroCOMputer	X2	Dubble speed

AKAI ELECTRIC CO., LTD.

12-14, 2-Chome, Higashi-Kojiya, Ohta-ku, Tokyo, Japan

SERVICE DEPARTMENT TEL:Tokyo (3745)9884 TELEX:J26261

Printed No. 910326-A1-3566

Printed Date April 30, 1991

350 Printed in Japan

AKAI


MODEL **AX-M430**


SCHEMATIC DIAGRAMS AND PC BOARDS


TABLE OF CONTENTS

I. BLOCK DIAGRAMS	
1. SIGNAL	3
2. SYSTEM	4
II. SCHEMATIC DIAGRAMS AND PC BOARDS	
1. CONNECTION DIAGRAM	5
2. MAIN	6
3. PRE AMP & OPERATION	8
4. GEQ	10
III. INFORMATION OF ICs	12

Use the following schematic diagrams and PC boards together with the provided service manual.

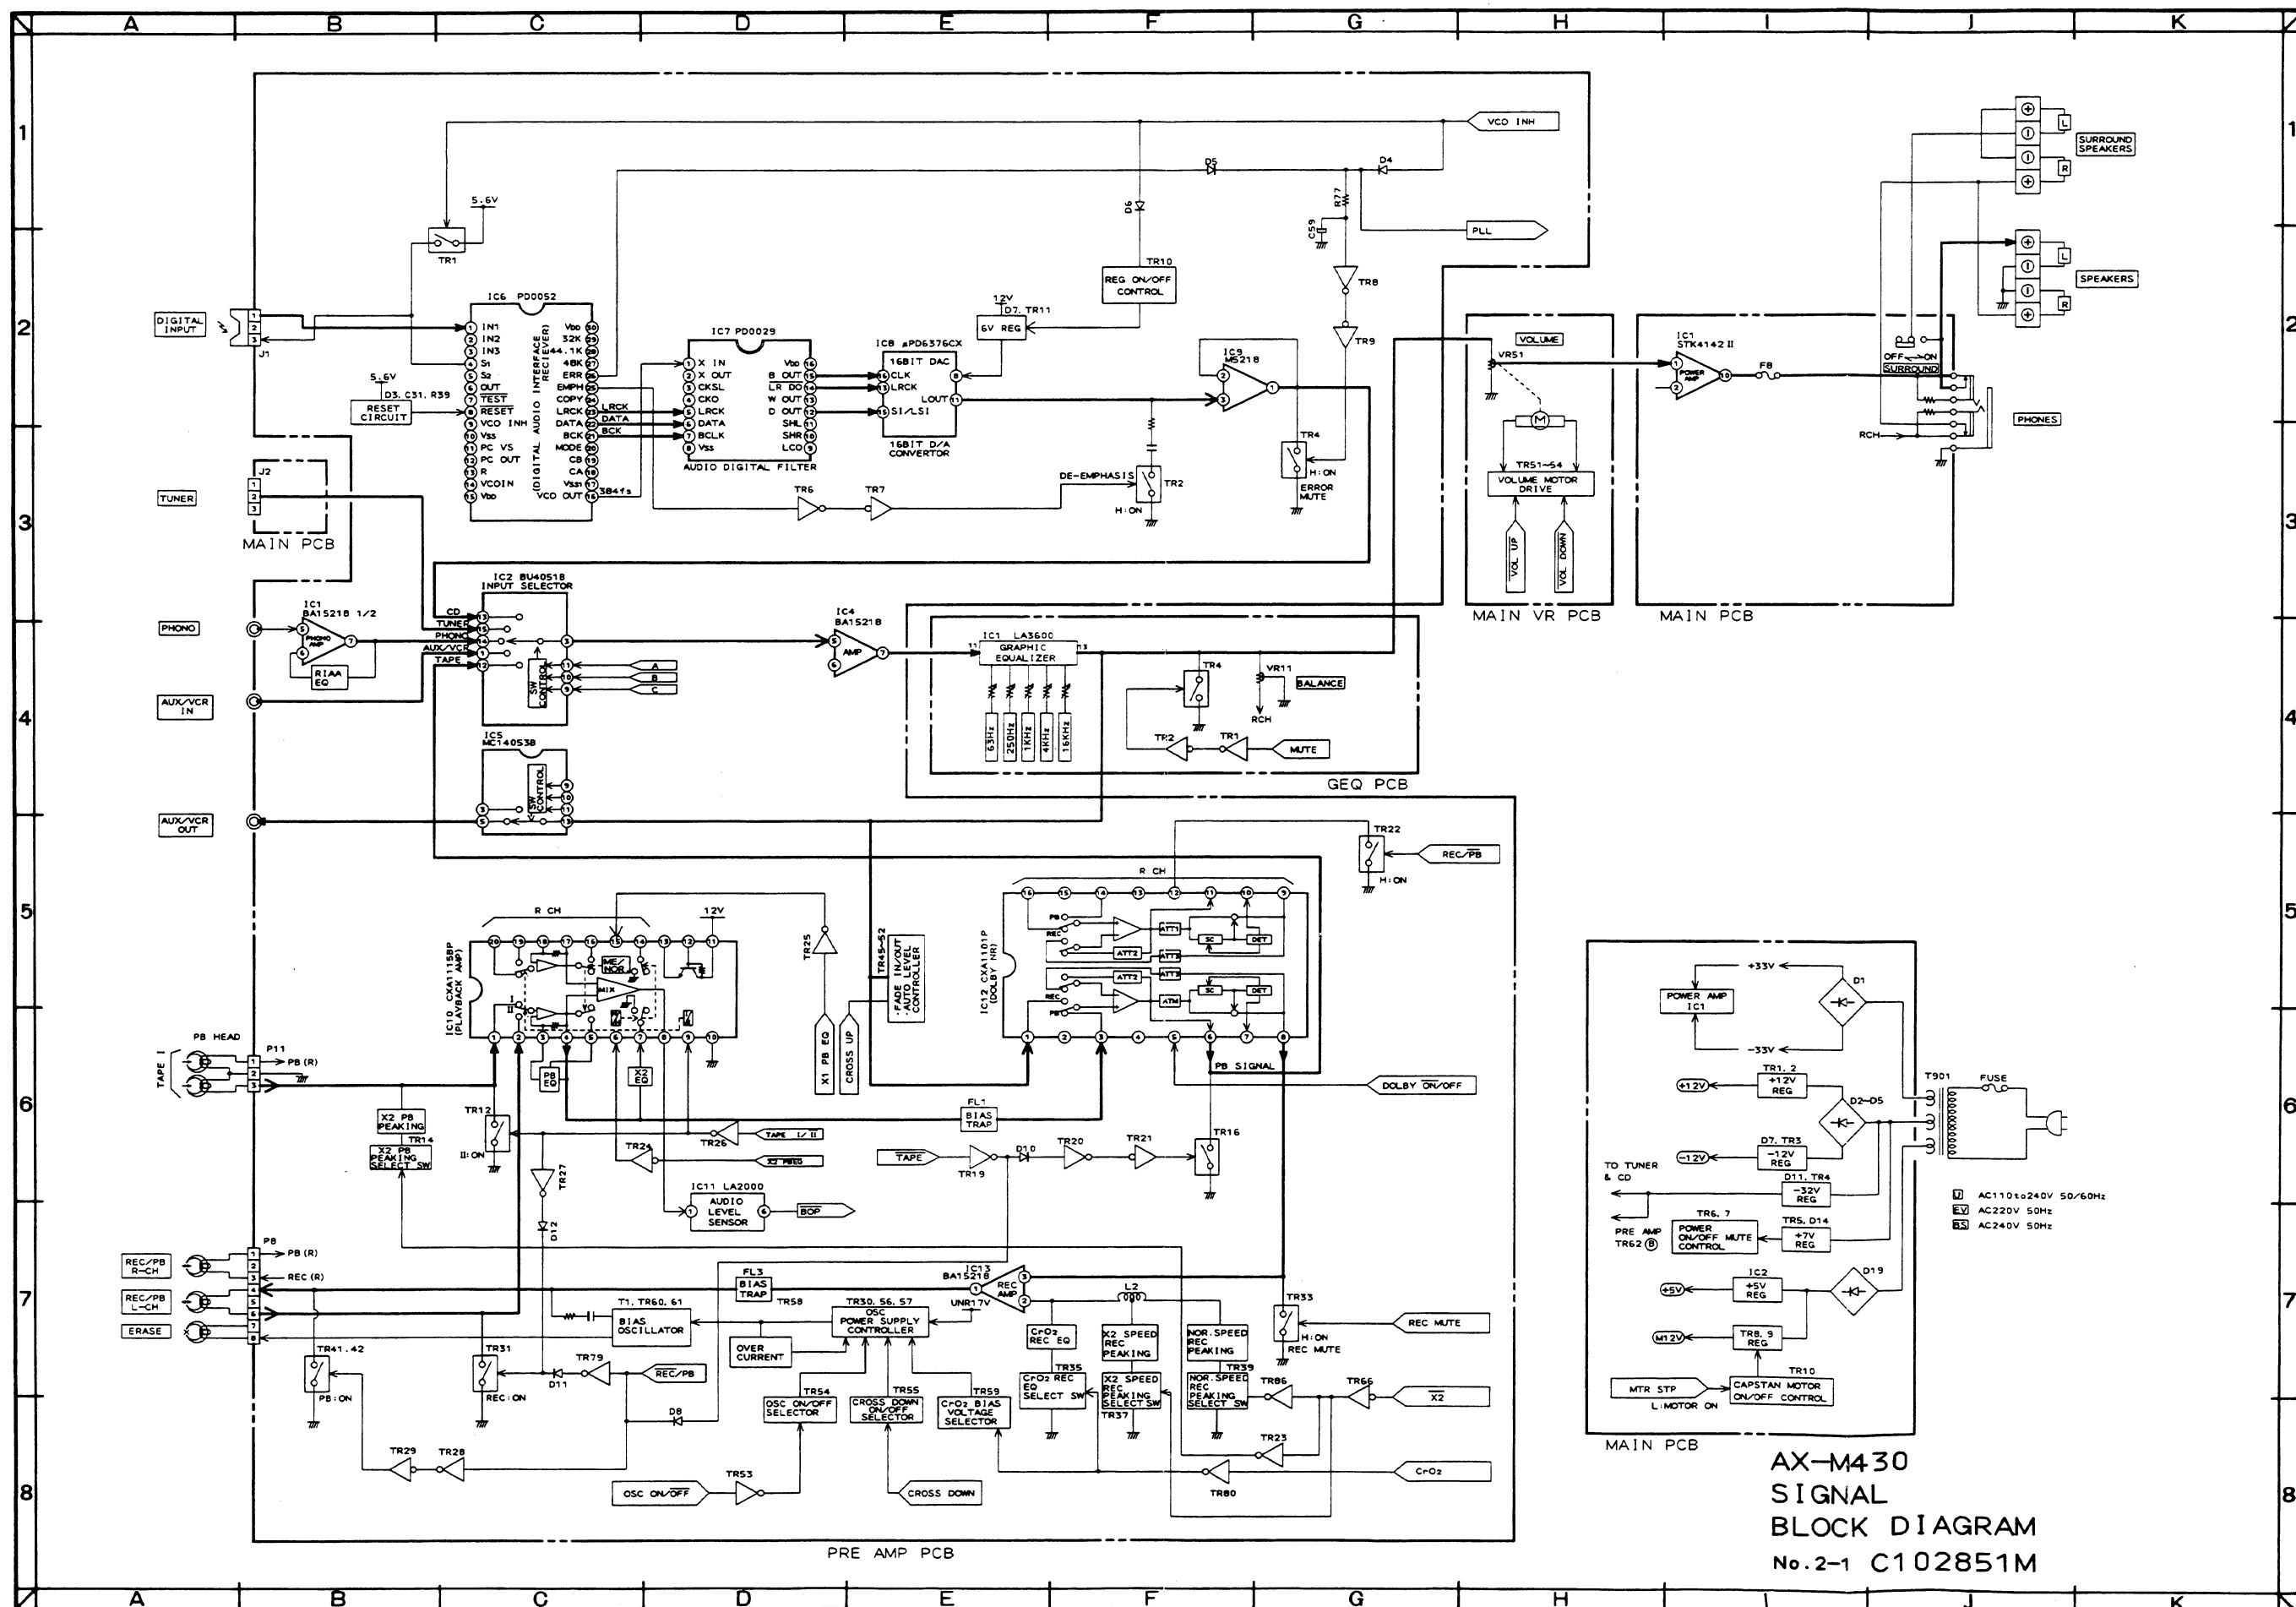


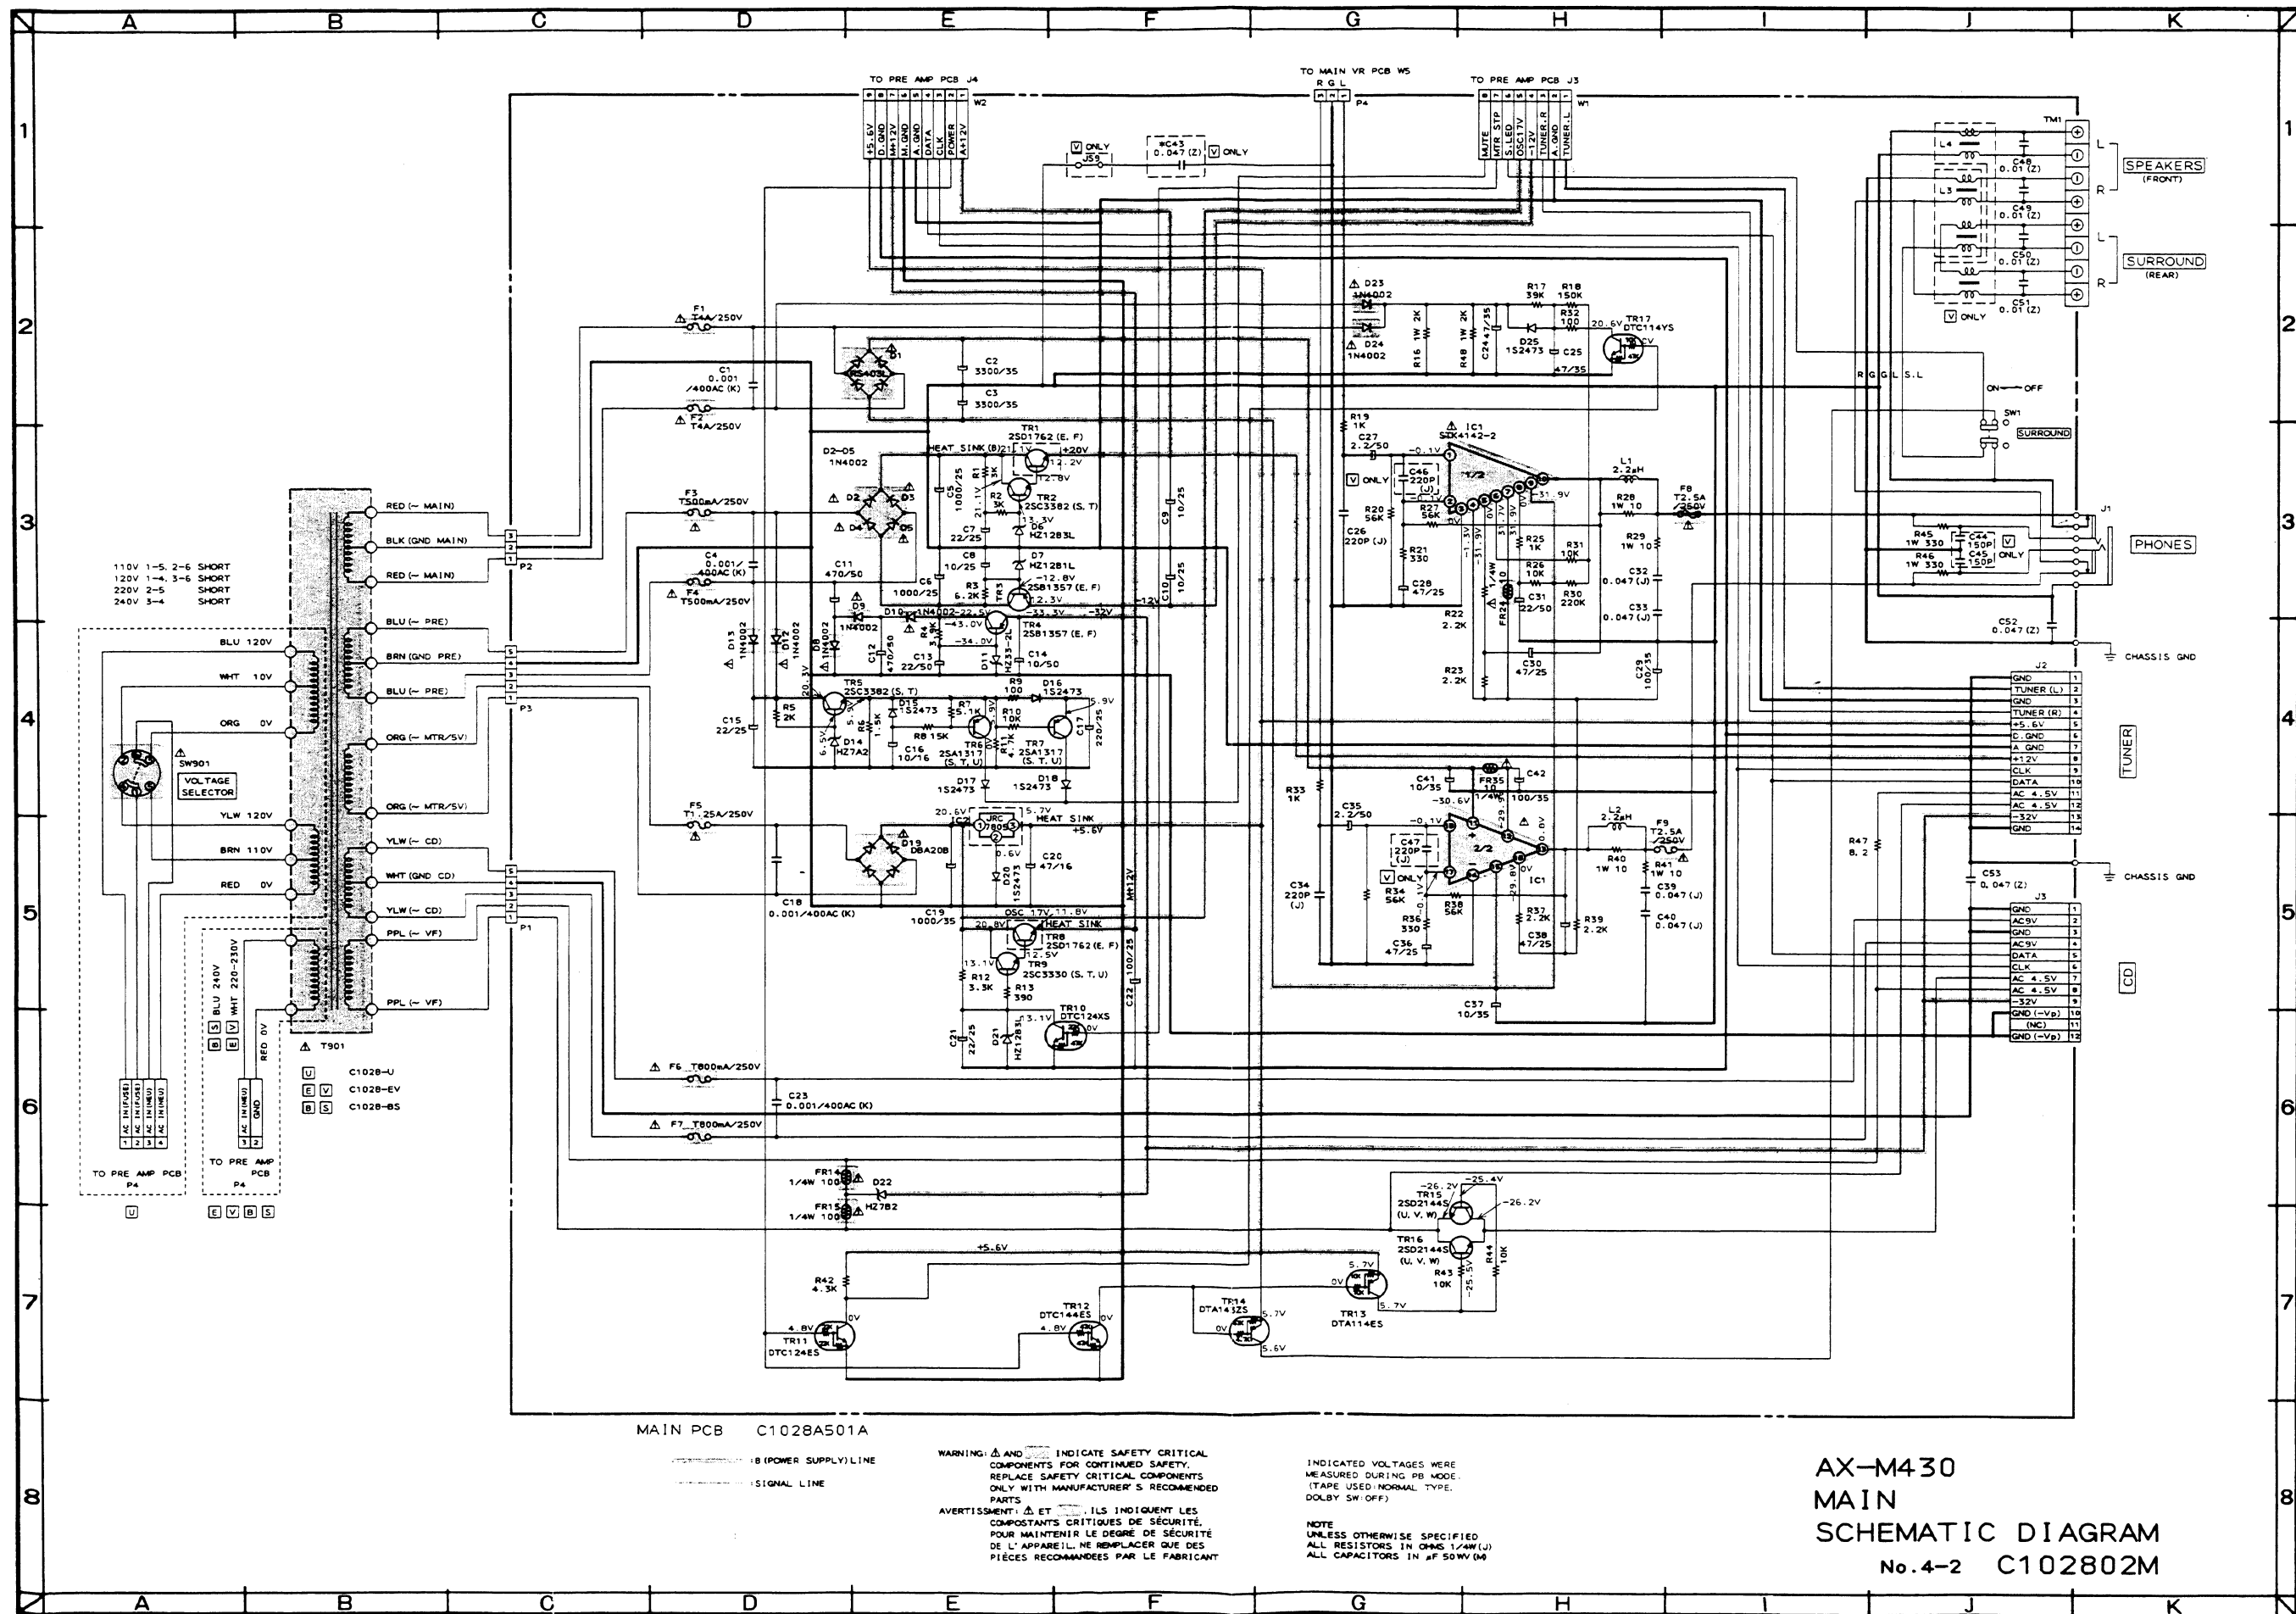

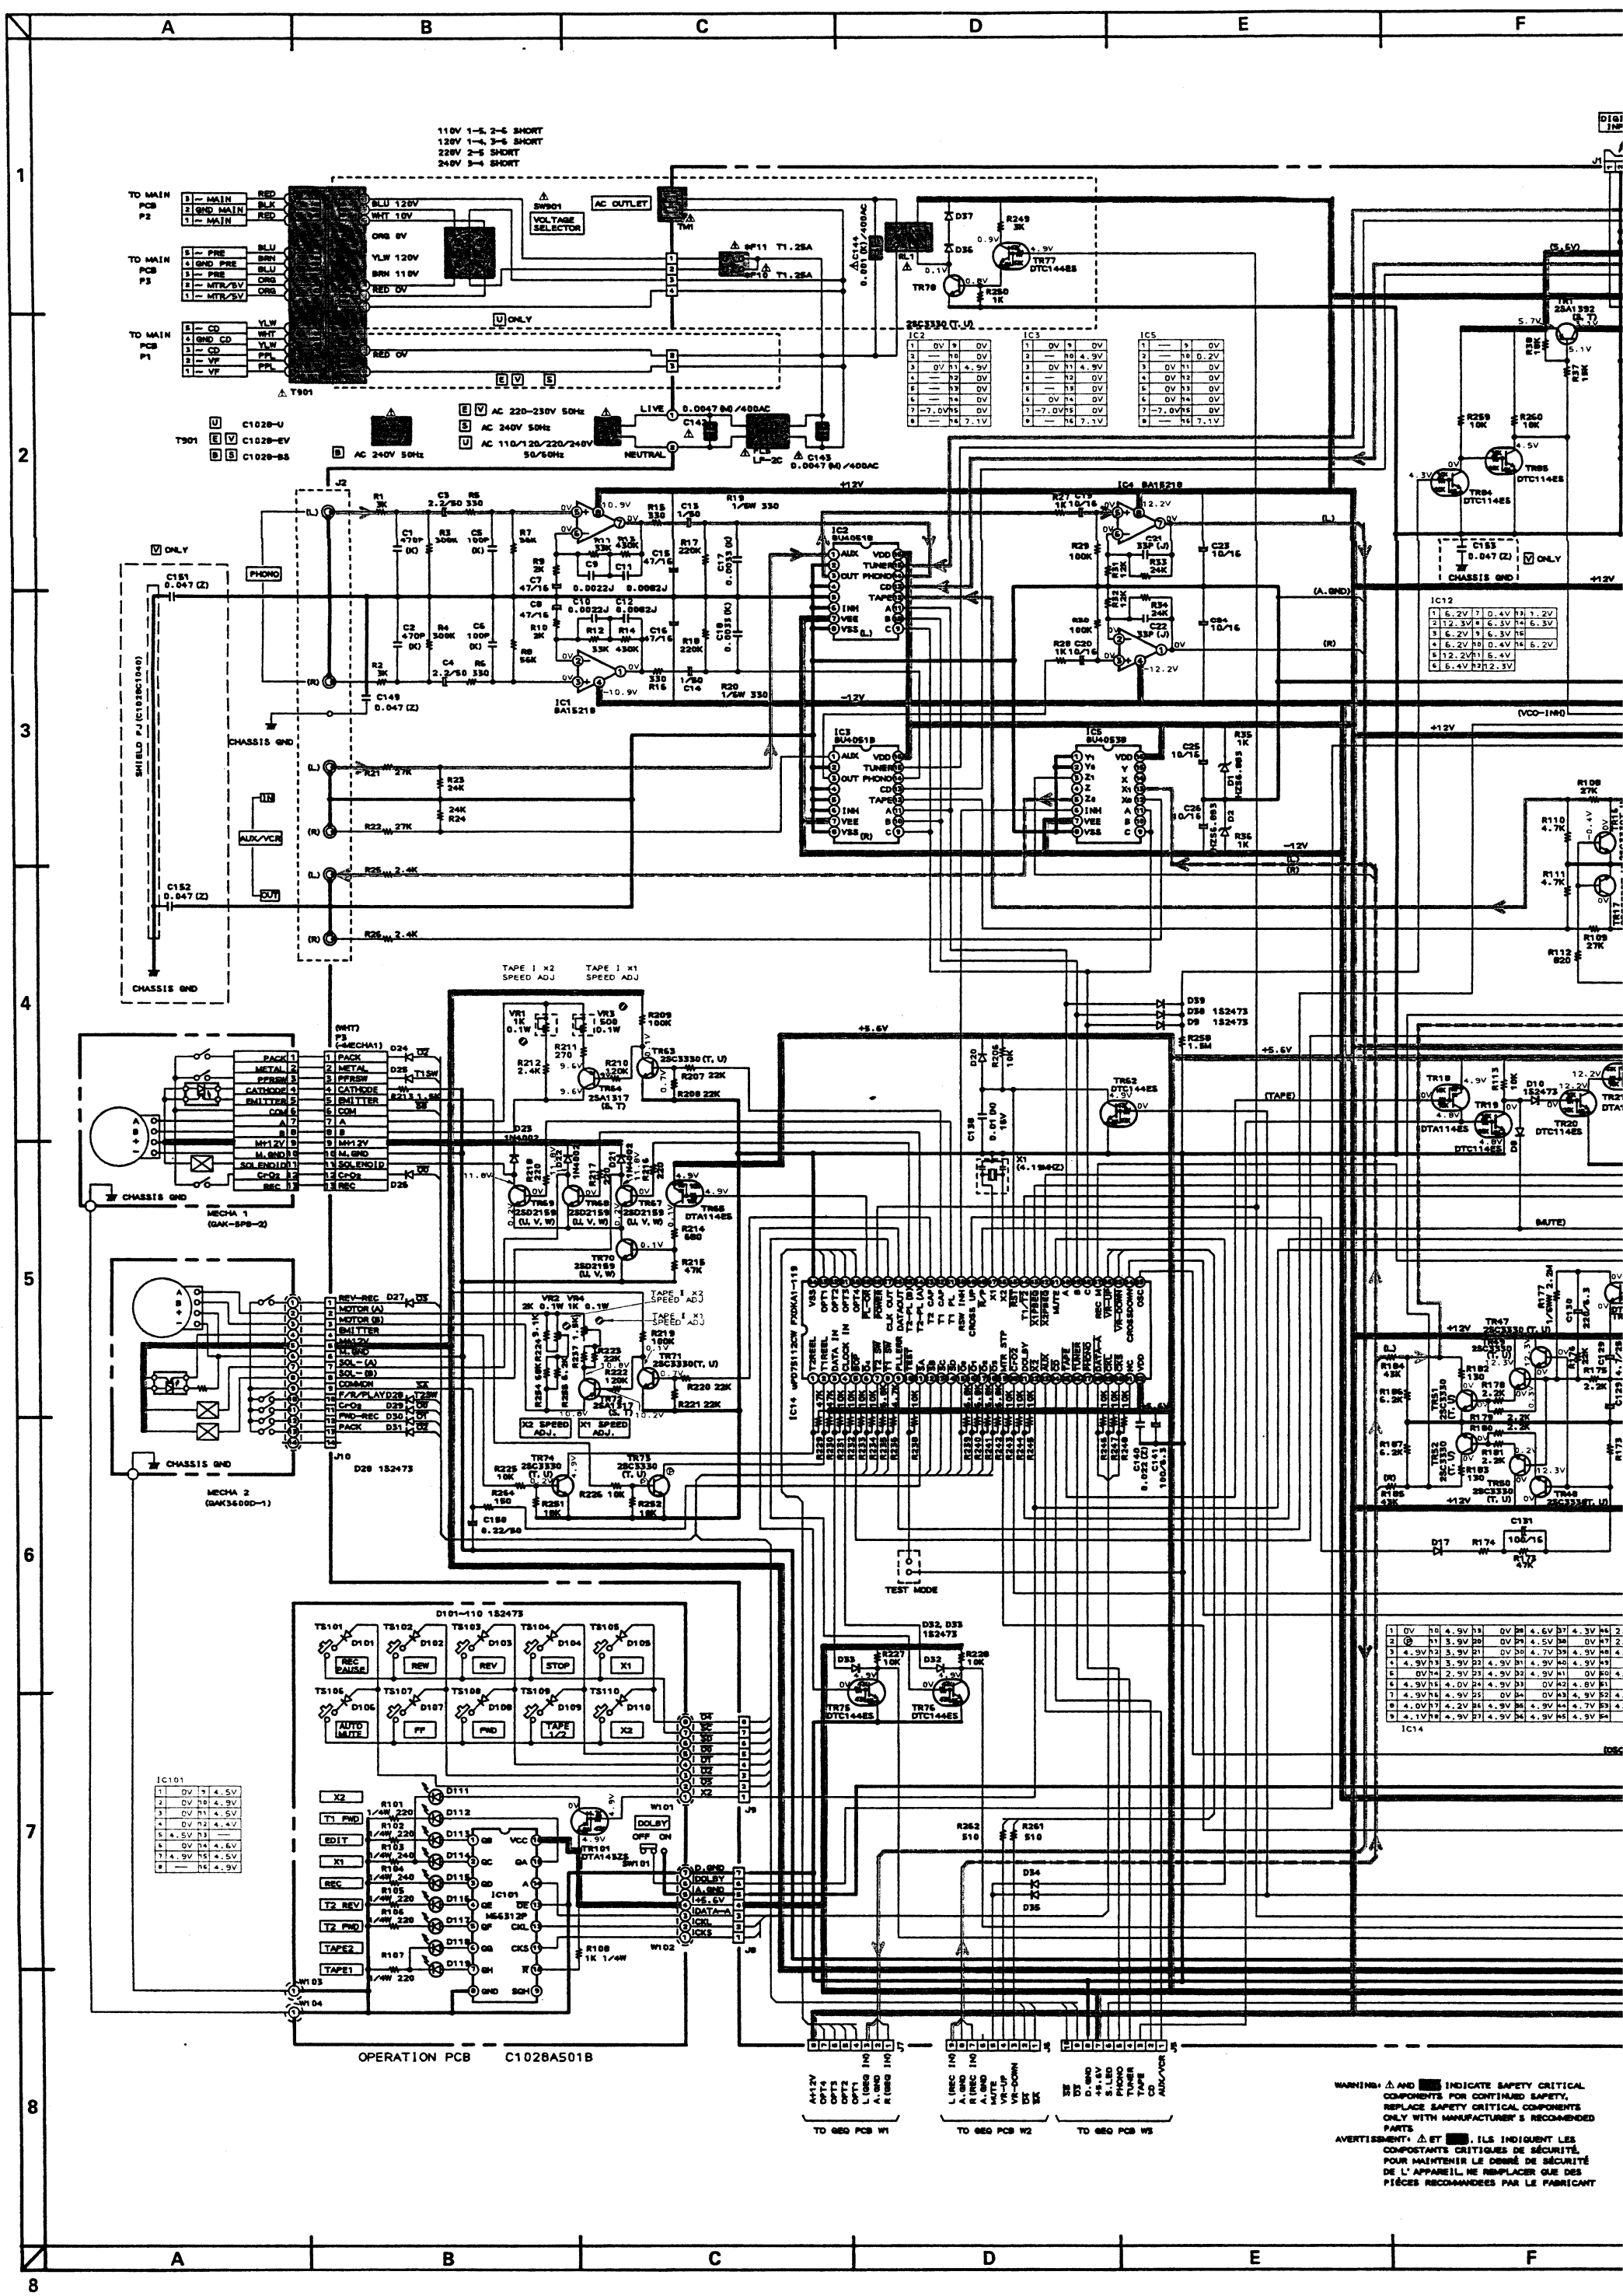

WARNING: ⚠ AND ■ INDICATE SAFETY CRITICAL COMPONENTS FOR CONTINUED SAFETY. REPLACE SAFETY CRITICAL COMPONENTS ONLY WITH MANUFACTURER'S RECOMMENDED PARTS.

AVERTISSEMENT: ⚠ ET ■ ILS INDICENT LES COMPOSANTS CRITIQUES DE SÉCURITÉ. POUR MAINTENIR LE Degré DE SÉCURITÉ DE L'APPAREIL, NE REMPLACER QUE DES PIÈCES RECOMMANDÉES PAR LE FABRICANT.

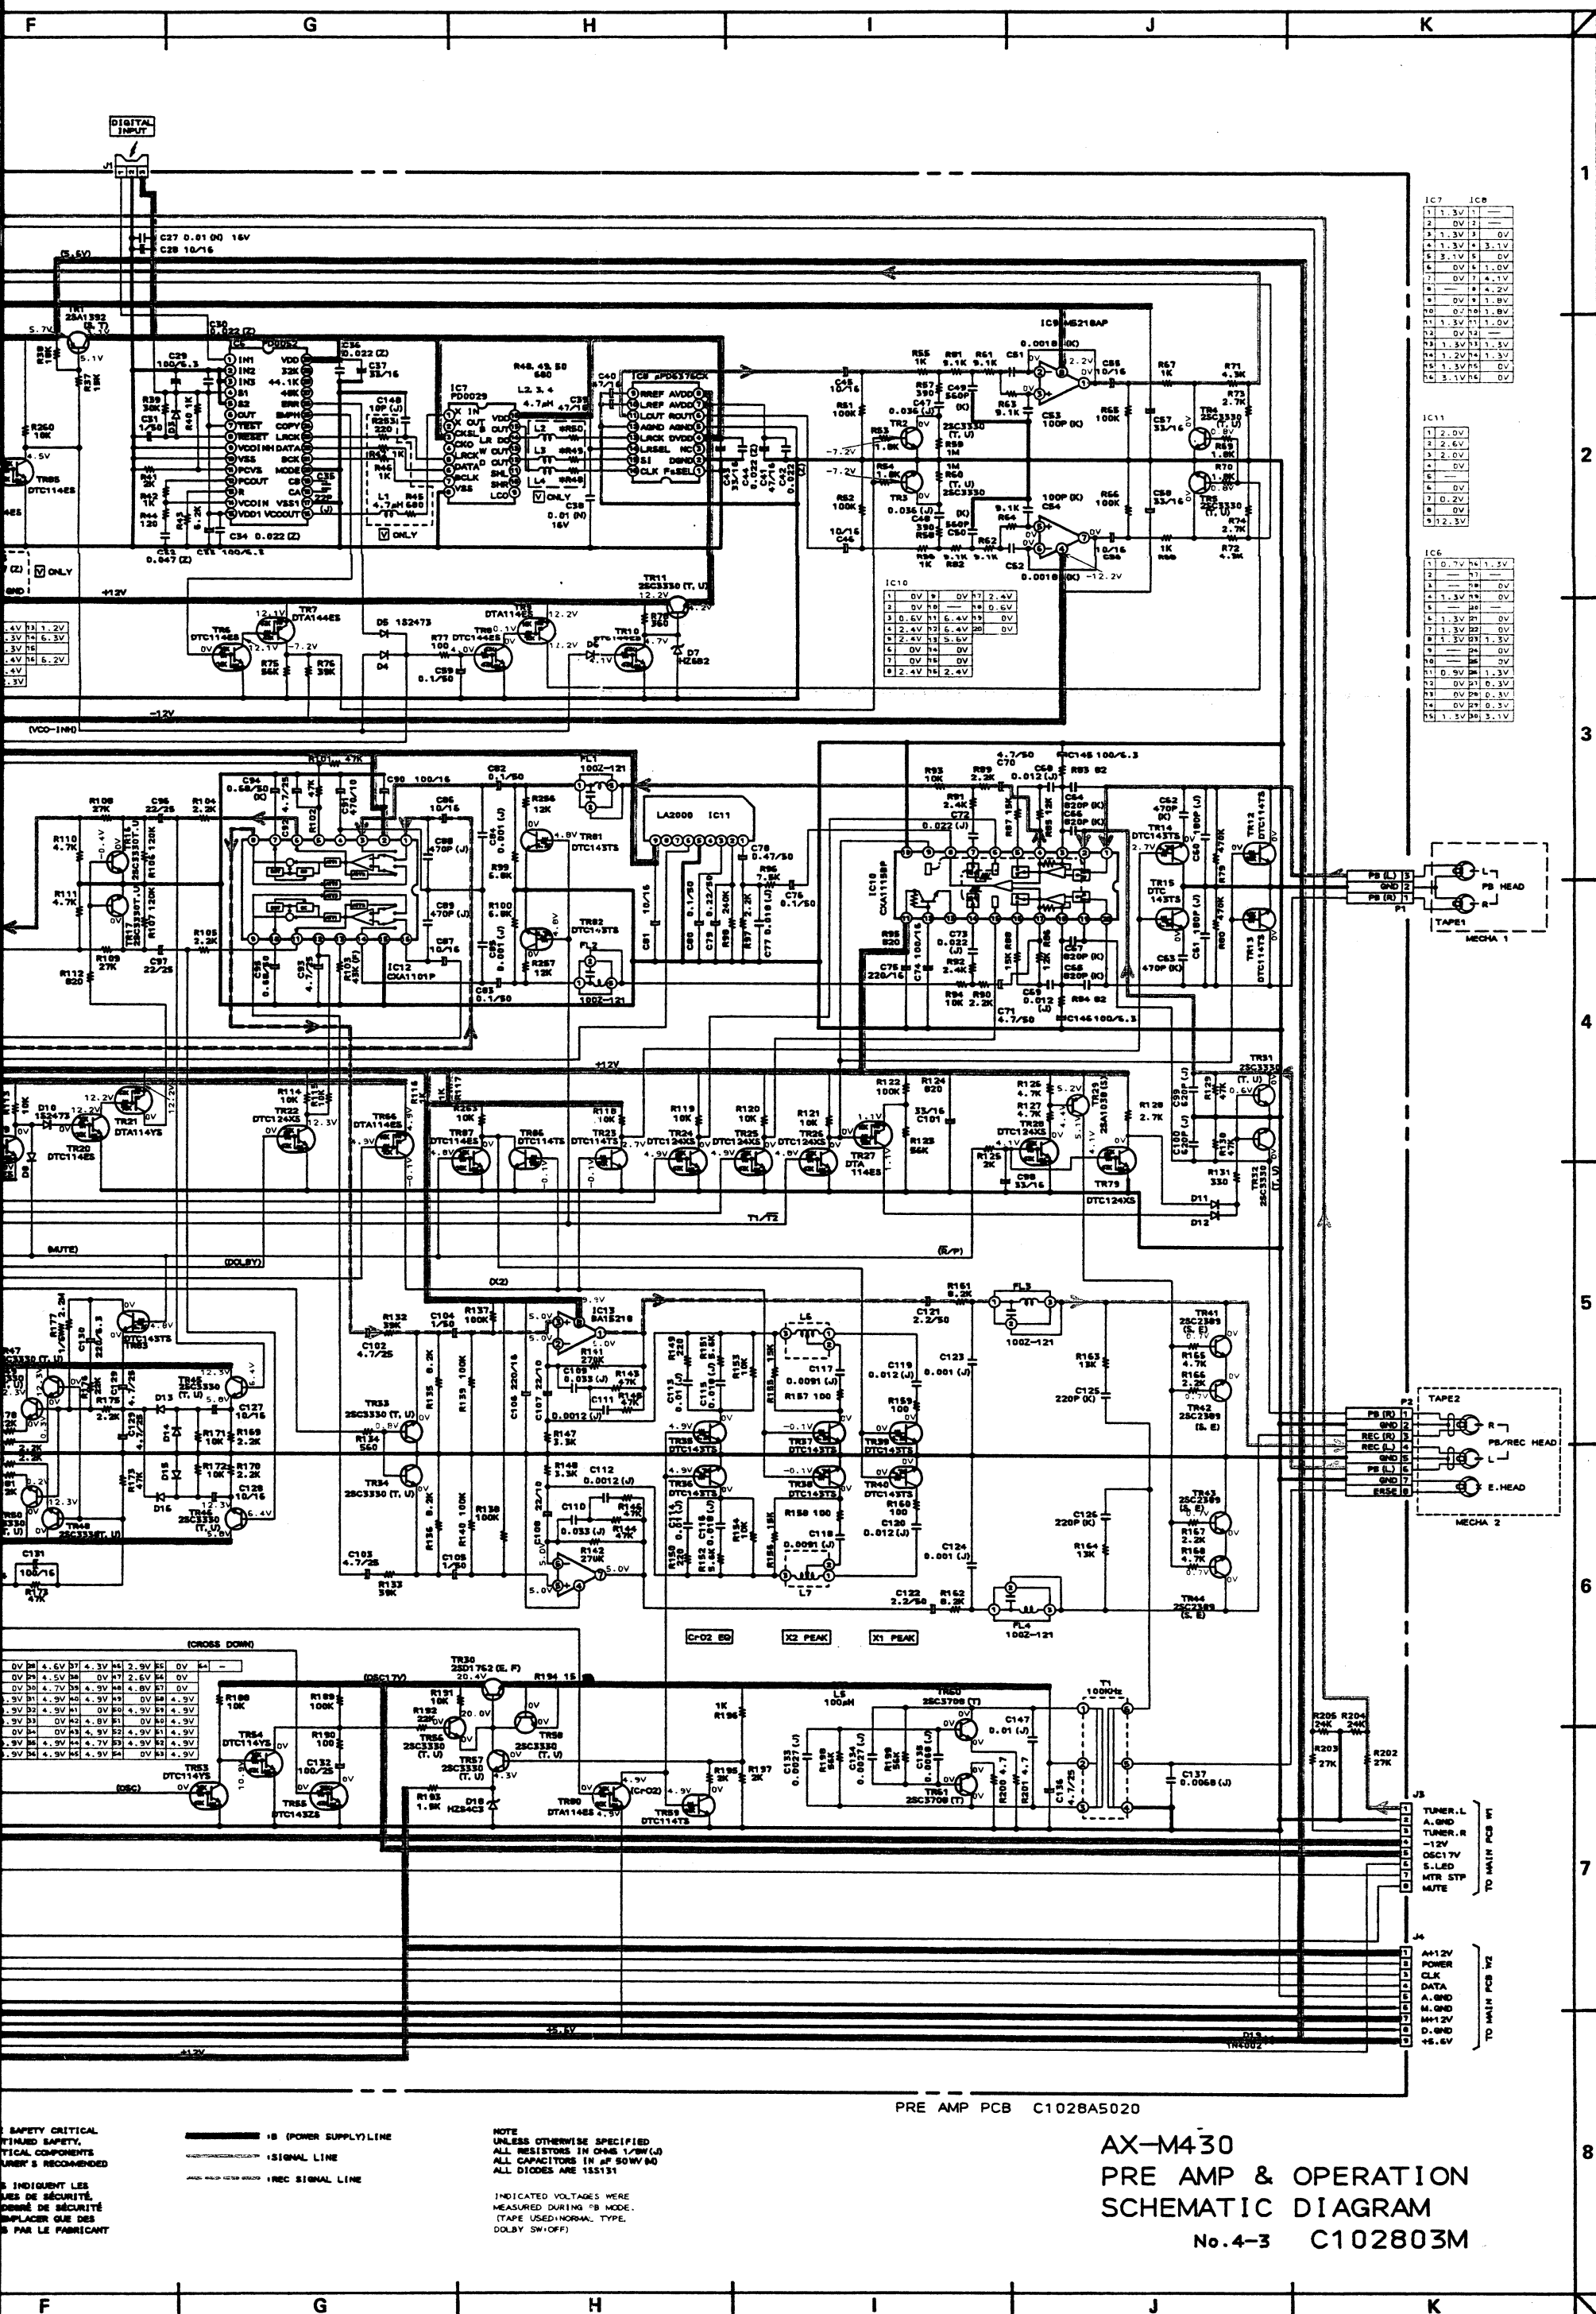

PRINCIPAL PARTS LOCATION

ICS


IC1	B5	TR28	C2
IC2	D6	TR29	C2
IC3	D5,6	TR30	B2
IC4	E5	TR31	E3
IC5	C,D5	TR32	E3,4
IC6	G,H5	TR33	B2,3
IC7	G4	TR34	B3
IC8	G3	TR35	D3
IC9	F4	TR36	D3
IC10	D4	TR37	C3
IC11	C4	TR38	C3
IC12	B4	TR39	C3
IC13	D3	TR40	C3
IC14	F2	TR41	E3

CONNECTORS


J1	E6	TR42	E3
J2	B6	TR43	E3
J3	A3	TR44	E3
J4	A3	TR45	B4
J5	C,D1	TR46	B4
J6	E1,2	TR47	B5
J7	F1	TR48	B5
J8	H1	TR49	B5
J9	H1	TR50	B5
J10	H2	TR51	C5
P1	E4	TR52	C5
P2	E3	TR53	B2
P3	H3	TR54	B2
P4	F5,6	TR55	B2
P4A	F6	TR56	B2

TRANSISTORS


TR1	H5	TR57	B2
TR2	G4	TR58	B2
TR3	F4	TR59	C2
TR4	F,G5	TR60	C2
TR5	F5	TR61	C2
TR6	G4	TR62	E2
TR7	G4	TR63	H3
TR8	H4	TR64	H3
TR9	G3	TR65	G3
TR10	H4	TR66	D2
TR11	G3	TR67	H,G2
TR12	E4	TR68	H2
TR13	E4	TR69	H3
TR14	E4	TR70	H3
TR15	E4	TR71	H3
TR16	B3	TR72	H2
TR17	B3	TR73	H2
TR18	D2	TR74	G2
TR19	D1,2	TR75	G3
TR20	B2	TR76	G3
TR21	B2	TR77	F6
TR22	B2	TR78	F6
TR23	C3	TR79	C2
TR24	D4	TR80	C1
TR25	E5	TR81	C4
TR26	D4	TR82	C4
TR27	D4	TR83	B4
		TR84	H4
		TR85	H4
		TR86	C3
		TR87	C3

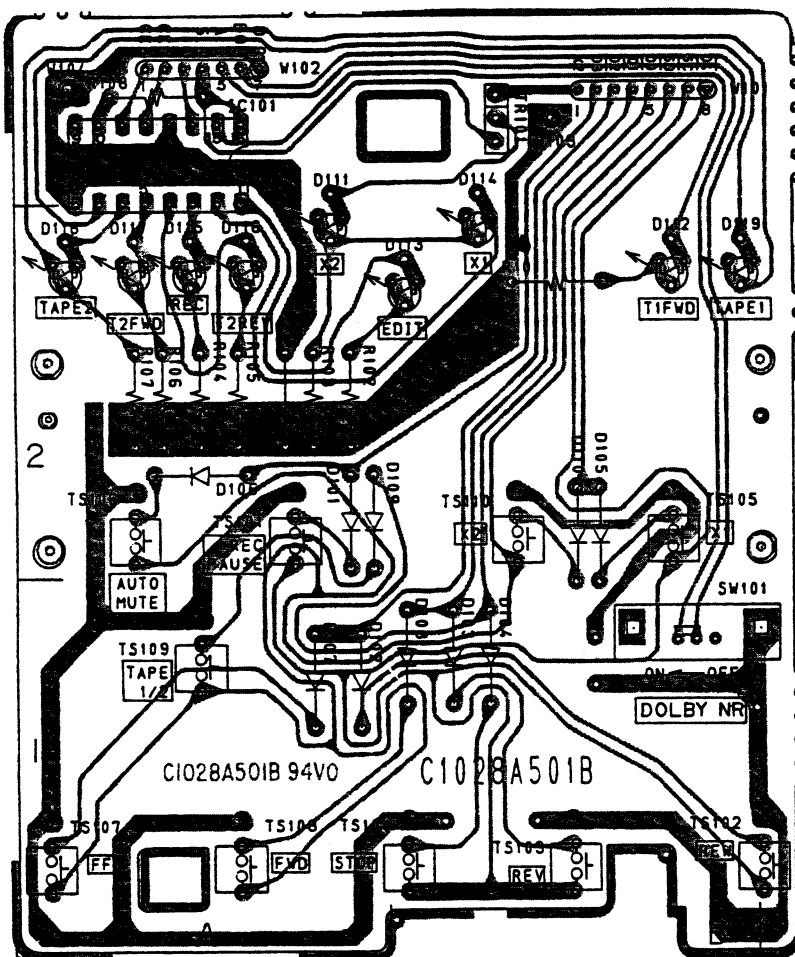

OPERATION PCB C1028A501B

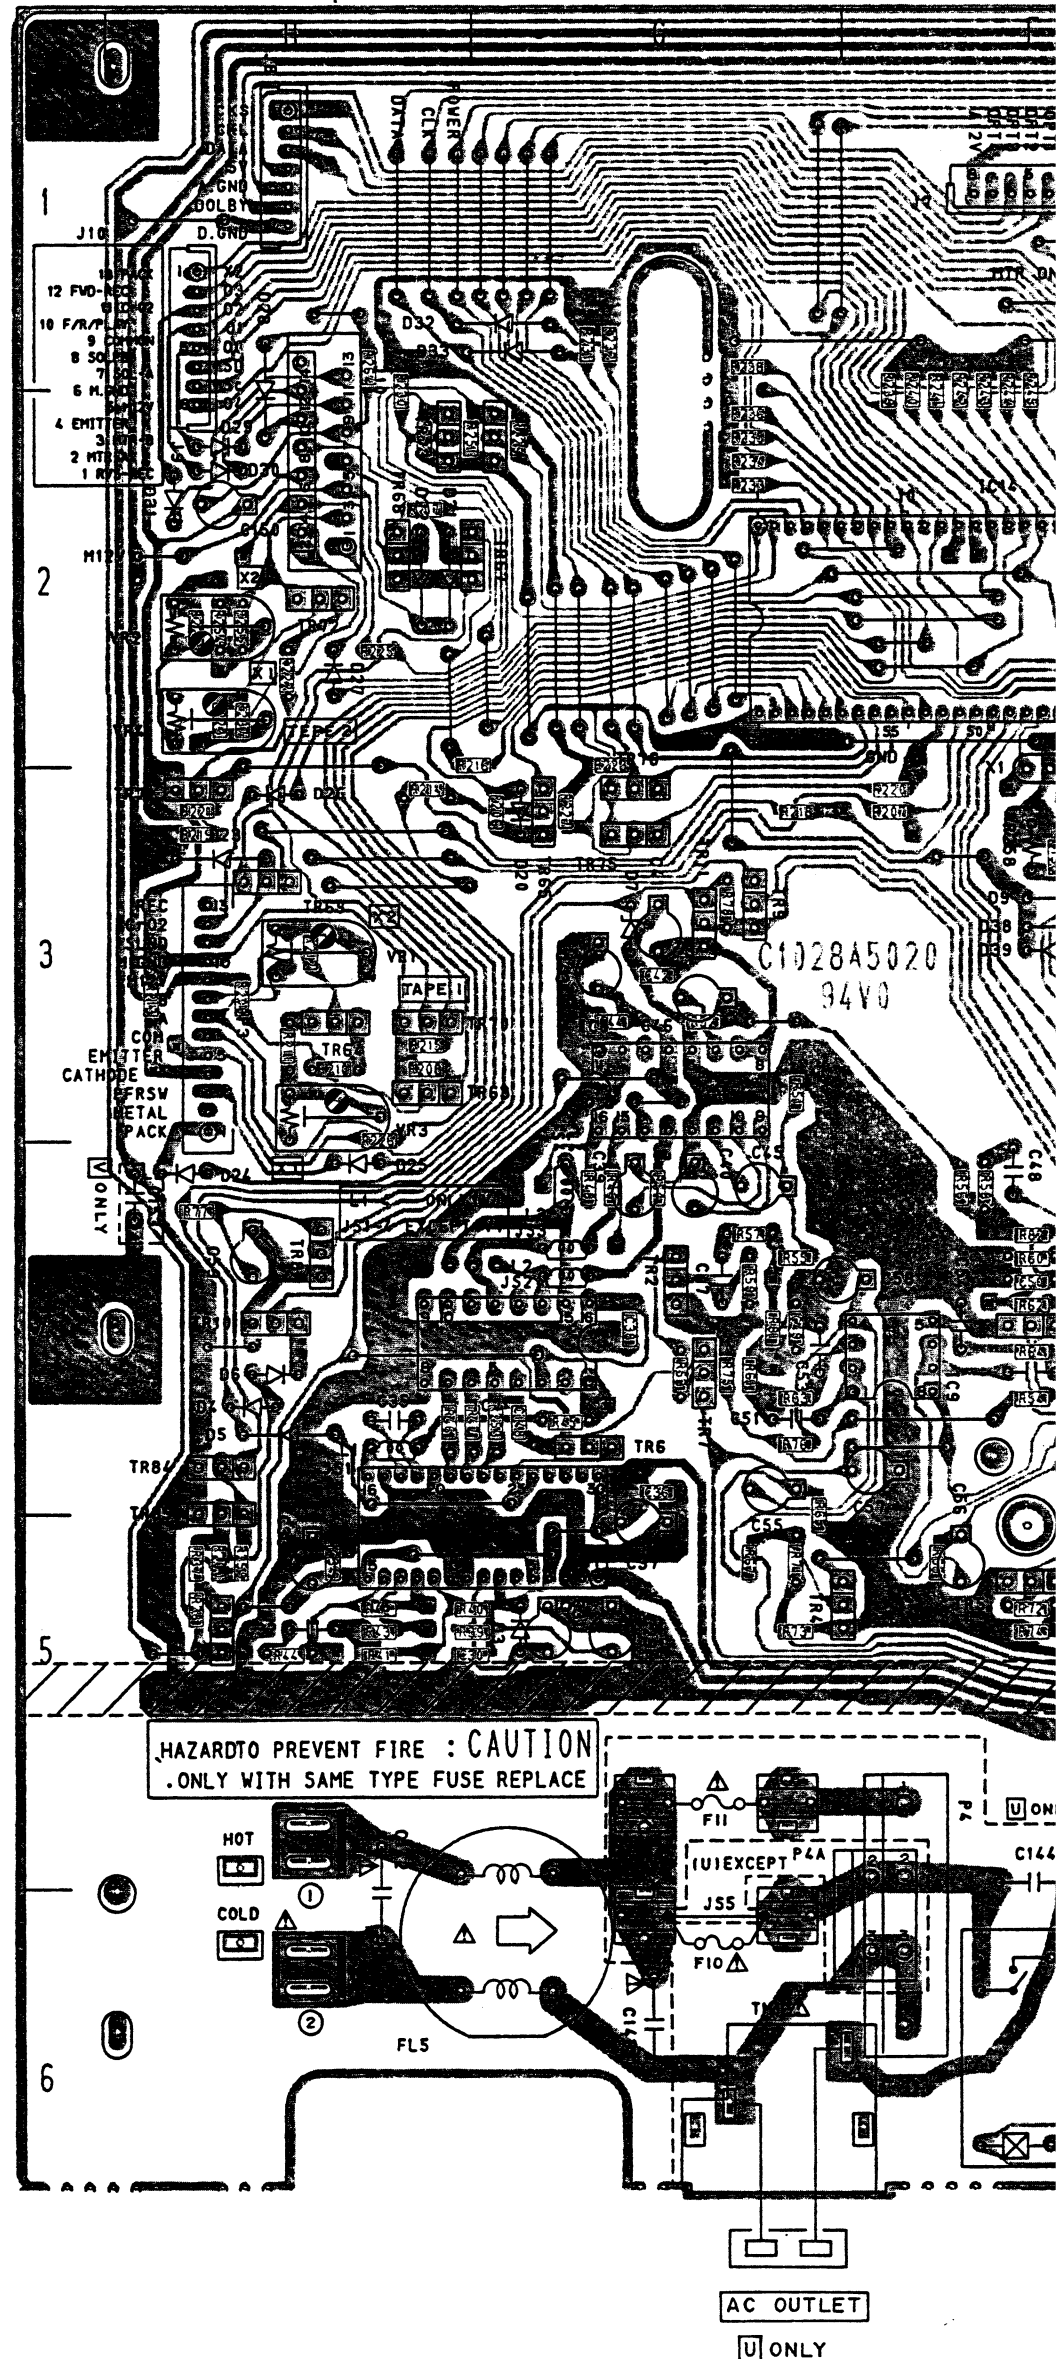

AC OUTLET
U ONLY

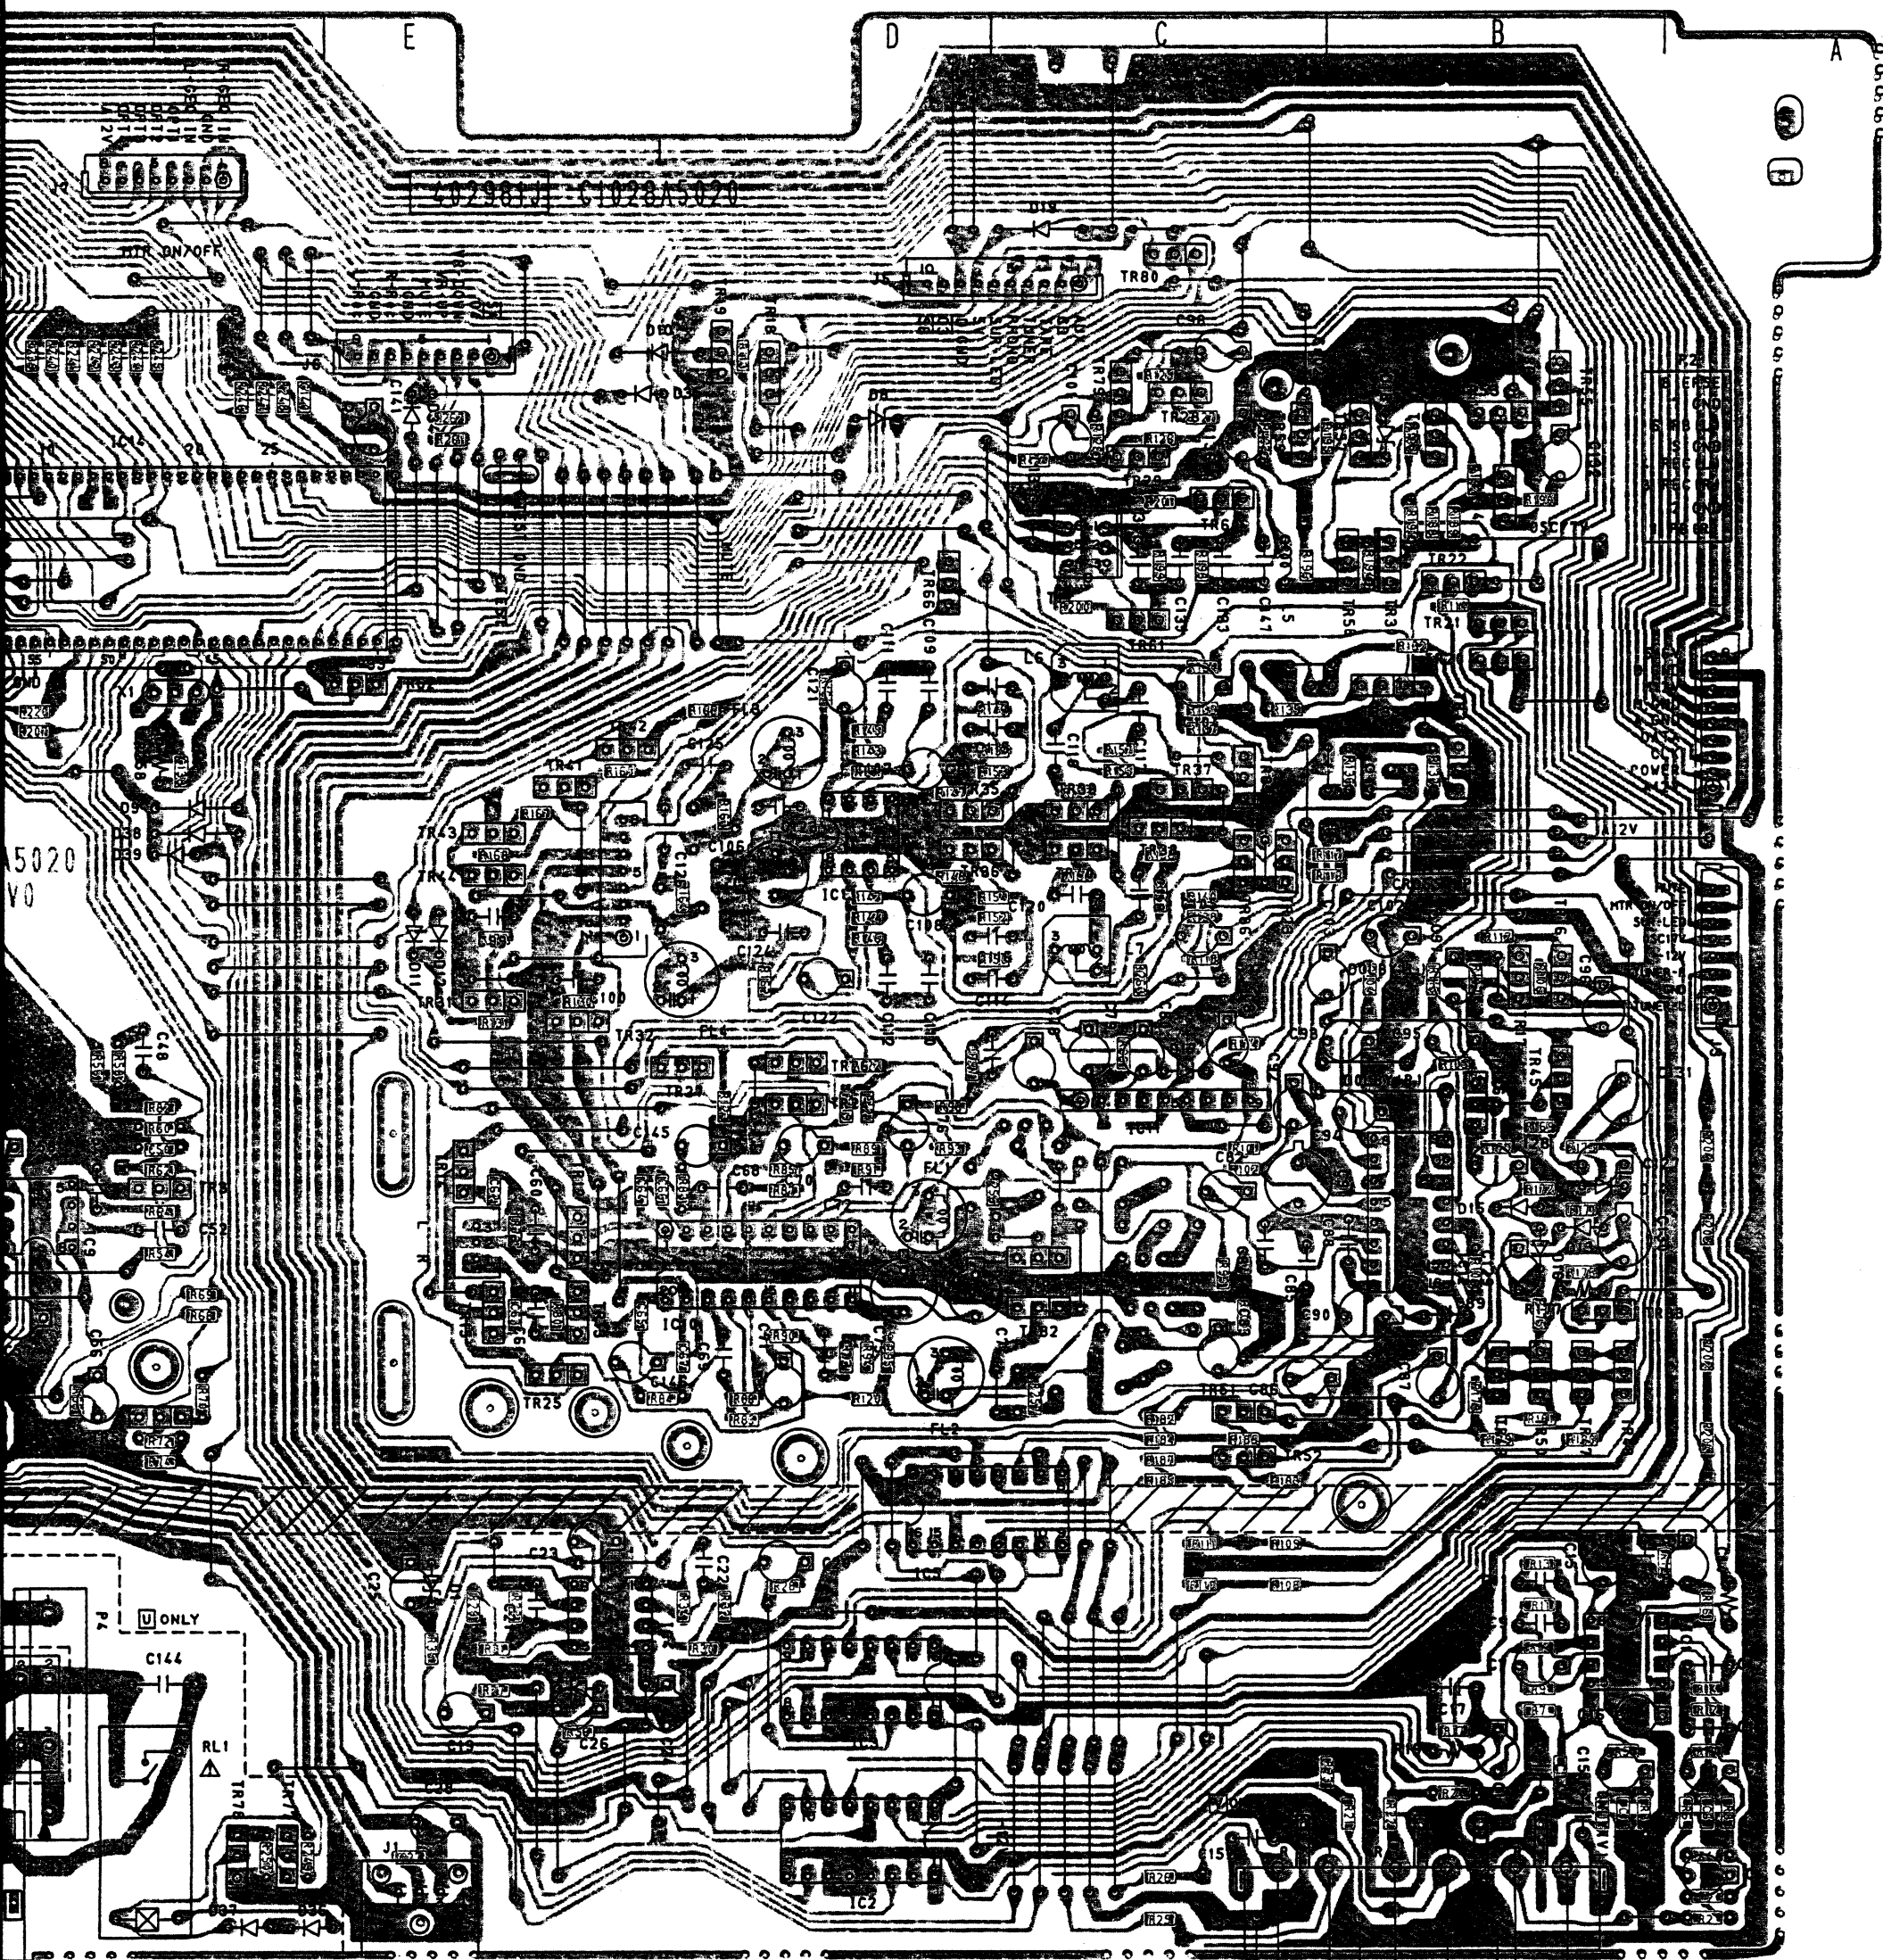

DIGITAL
INPUT


PRE AMP PCB C1028A5020

WARNING: Δ INDICATES SAFETY CRITICAL COMPONENTS. FOR CONTINUED SAFETY,
REPLACE SAFETY CRITICAL COMPONENTS ONLY WITH MANUFACTURER'S
RECOMMENDED PARTS

AVERTISSEMENT: Δ IL INDIQUE LES COMPOSANTS CRITIQUES DE SÉCURITÉ.
POUR MAINTENIR LE DEGRÉ DE SÉCURITÉ DE L'APPAREIL,
NE REMPLACER QUE DES PIÈCES RECOMMANDÉES PAR LE FABRICANT

AUX / VCR

PHONO

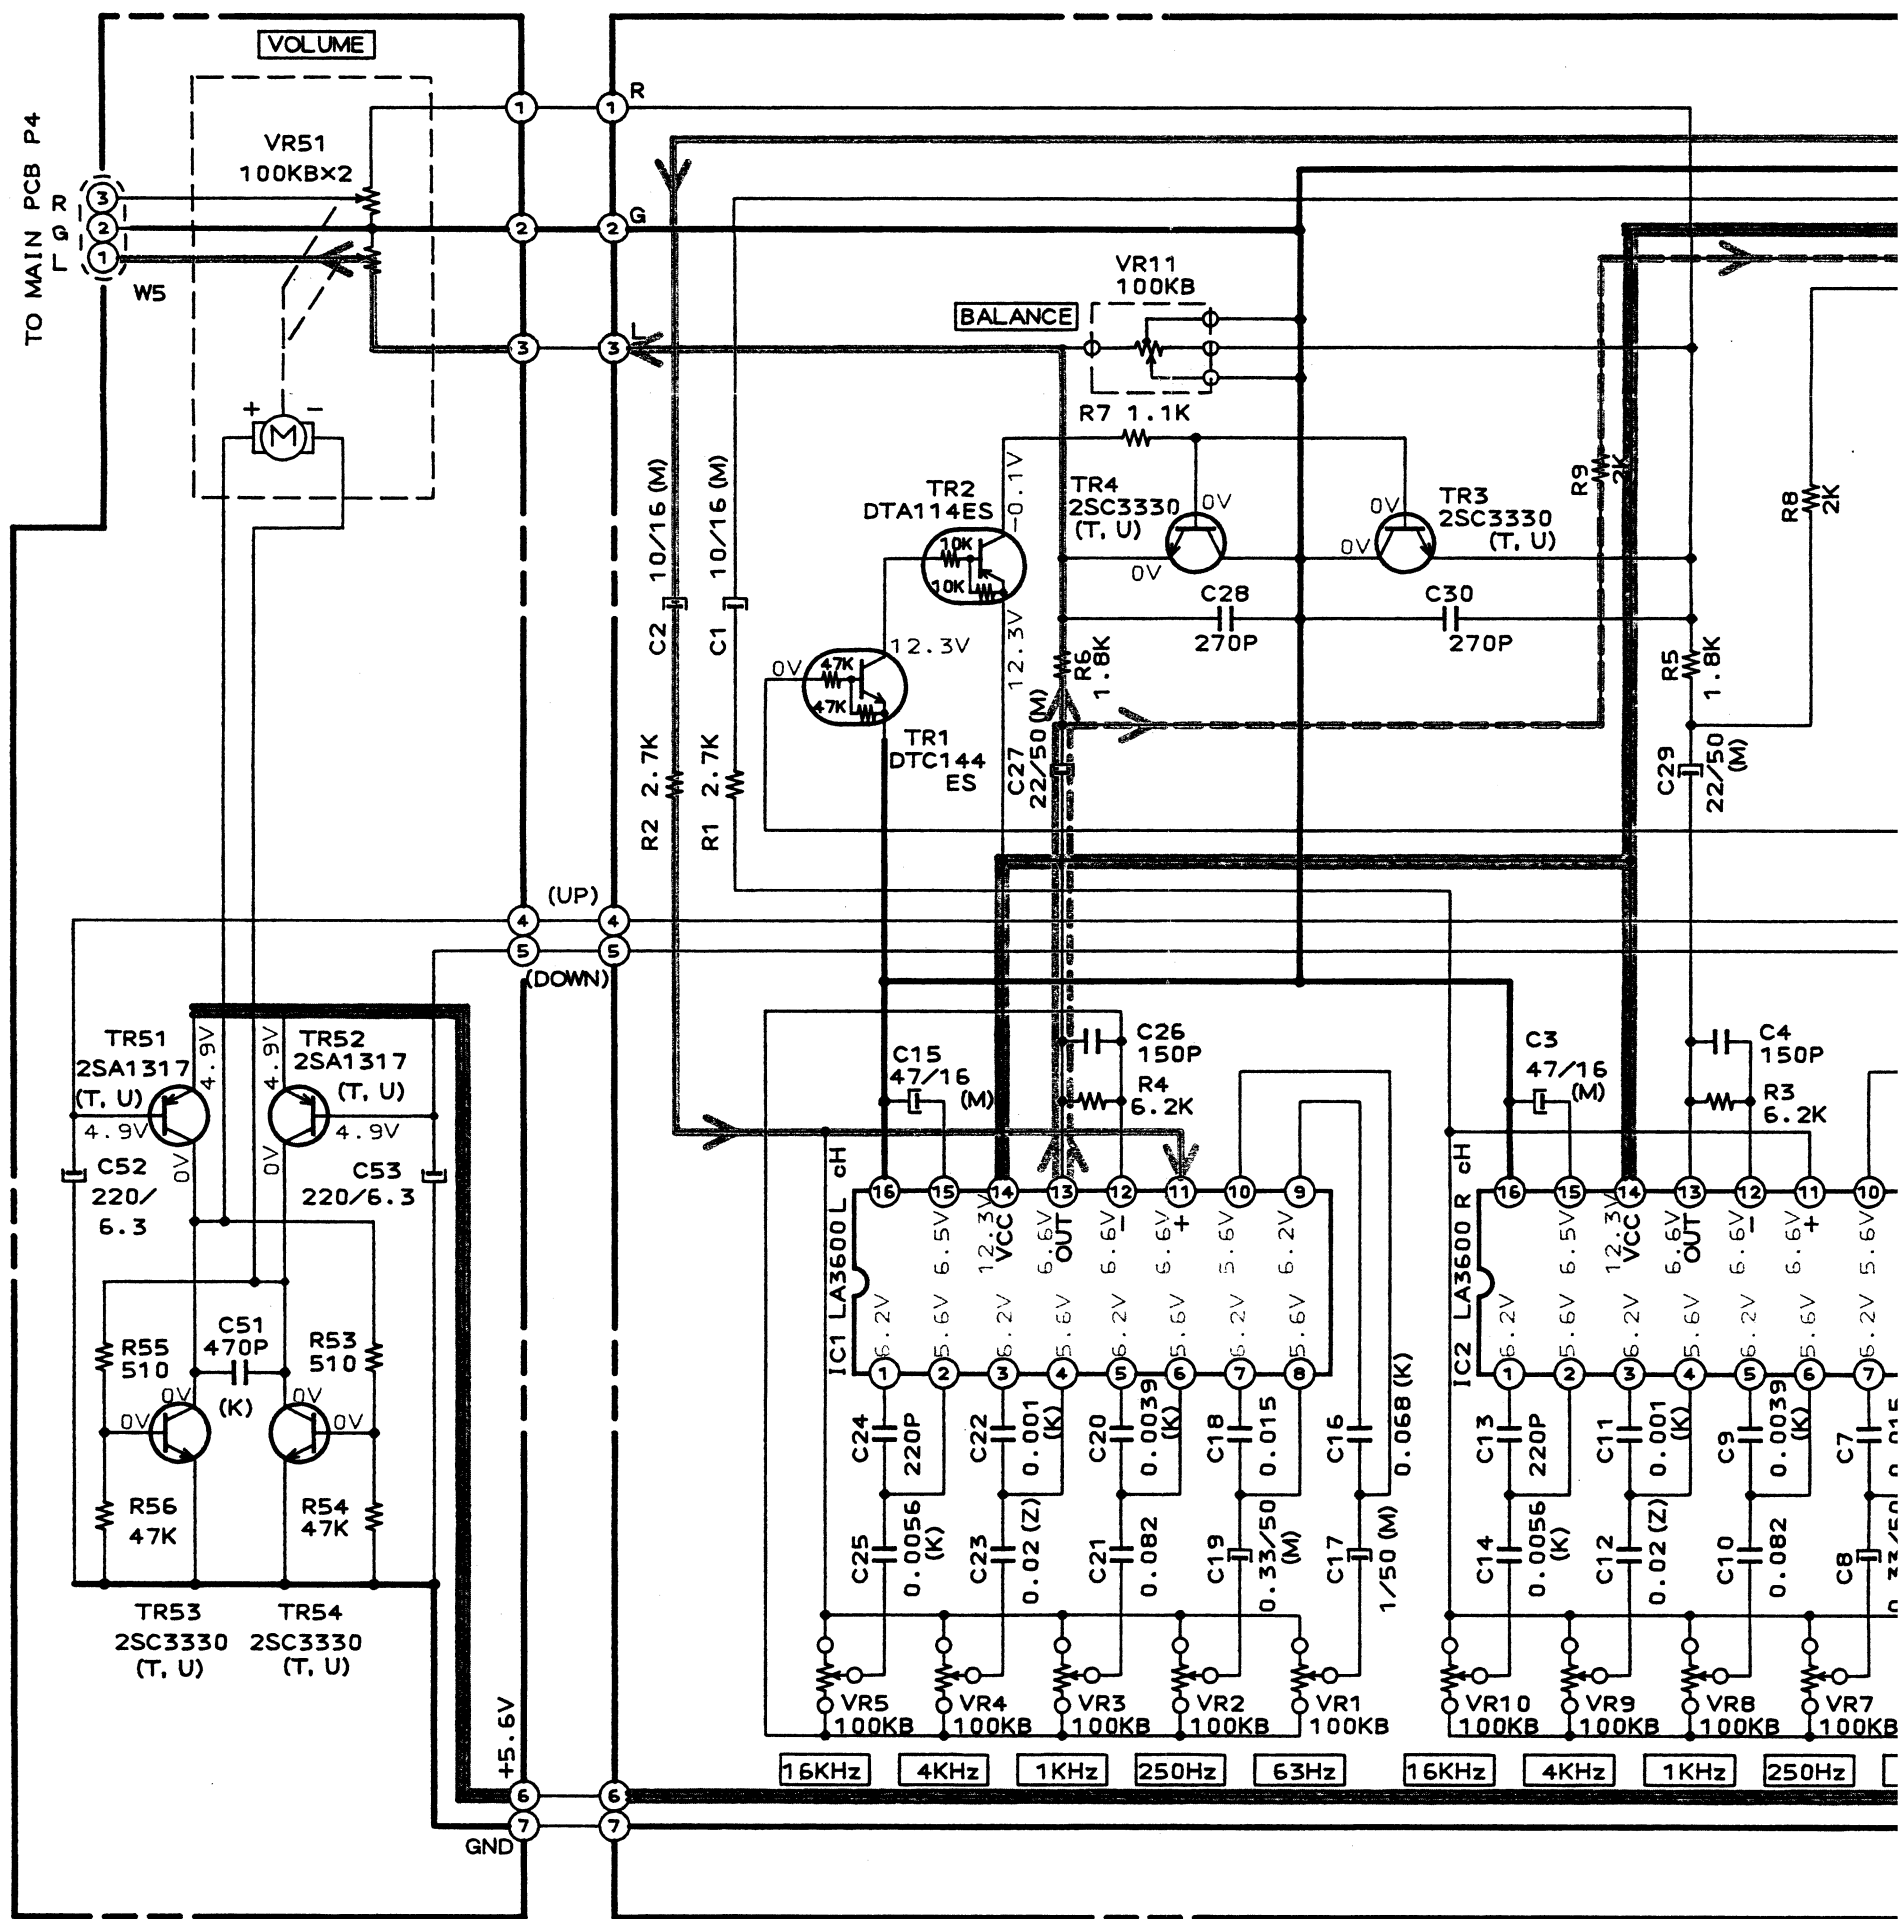


MAIN VR PCB
C1028A503B

GEQ PCB C1028A503A

B (POWER SUPPLY) LINE
 SIGNAL LINE
 REC SIGNAL LINE


NOTE
 UNLESS
 ALL RE
 ALL CA

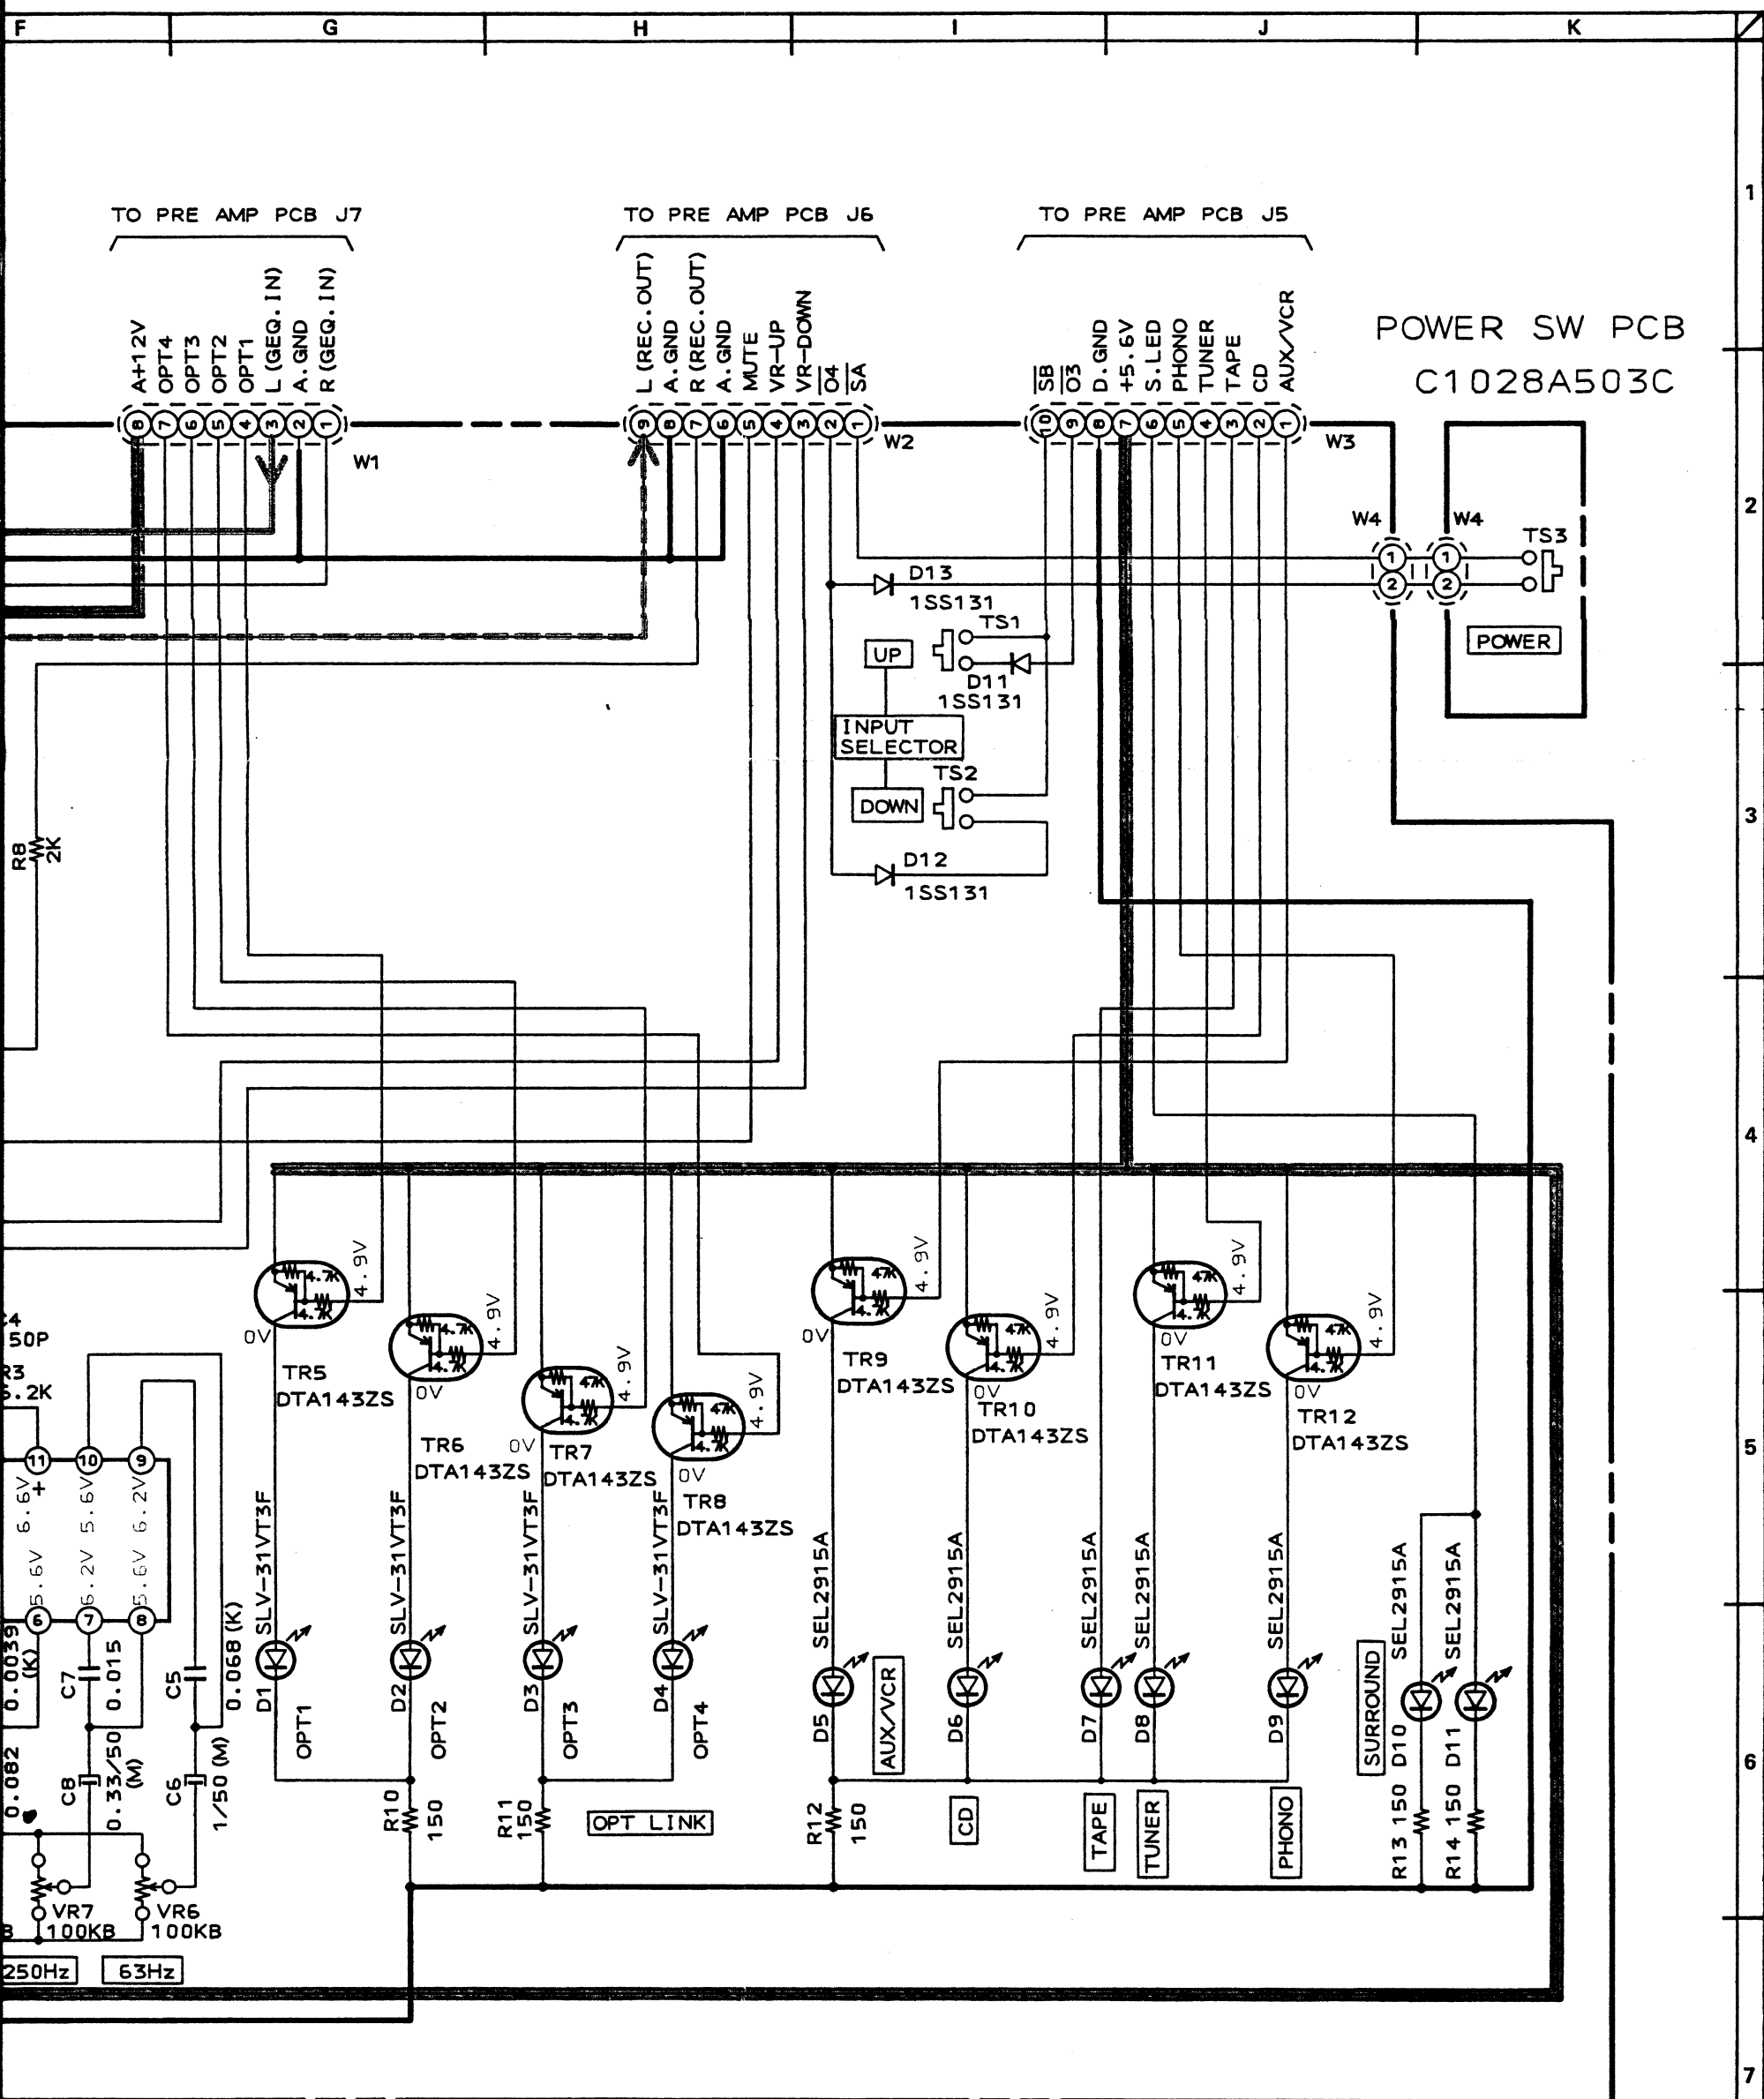


NOTE
UNLESS OTHERWISE SPECIFIED
ALL RESISTORS IN OHMS 1/6W (J)
ALL CAPACITORS IN μ F 50 WV (J)

INDICATED VOLTAGES WERE
MEASURED DURING PB MODE.
(TAPE USED: NORMAL TYPE,
DOLBY SW: OFF)


AX-M430
GEQ
SCHEMATIC DIAGRAM
No. 4-4 C102804M

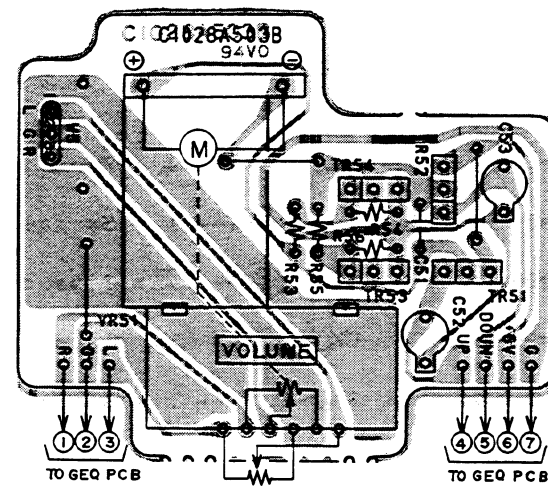

MAIN VR PCB C1028A503B

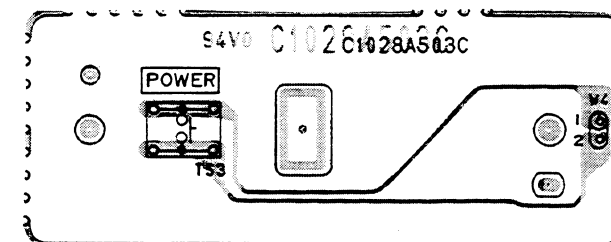

POWER SW PCB C1028A503C

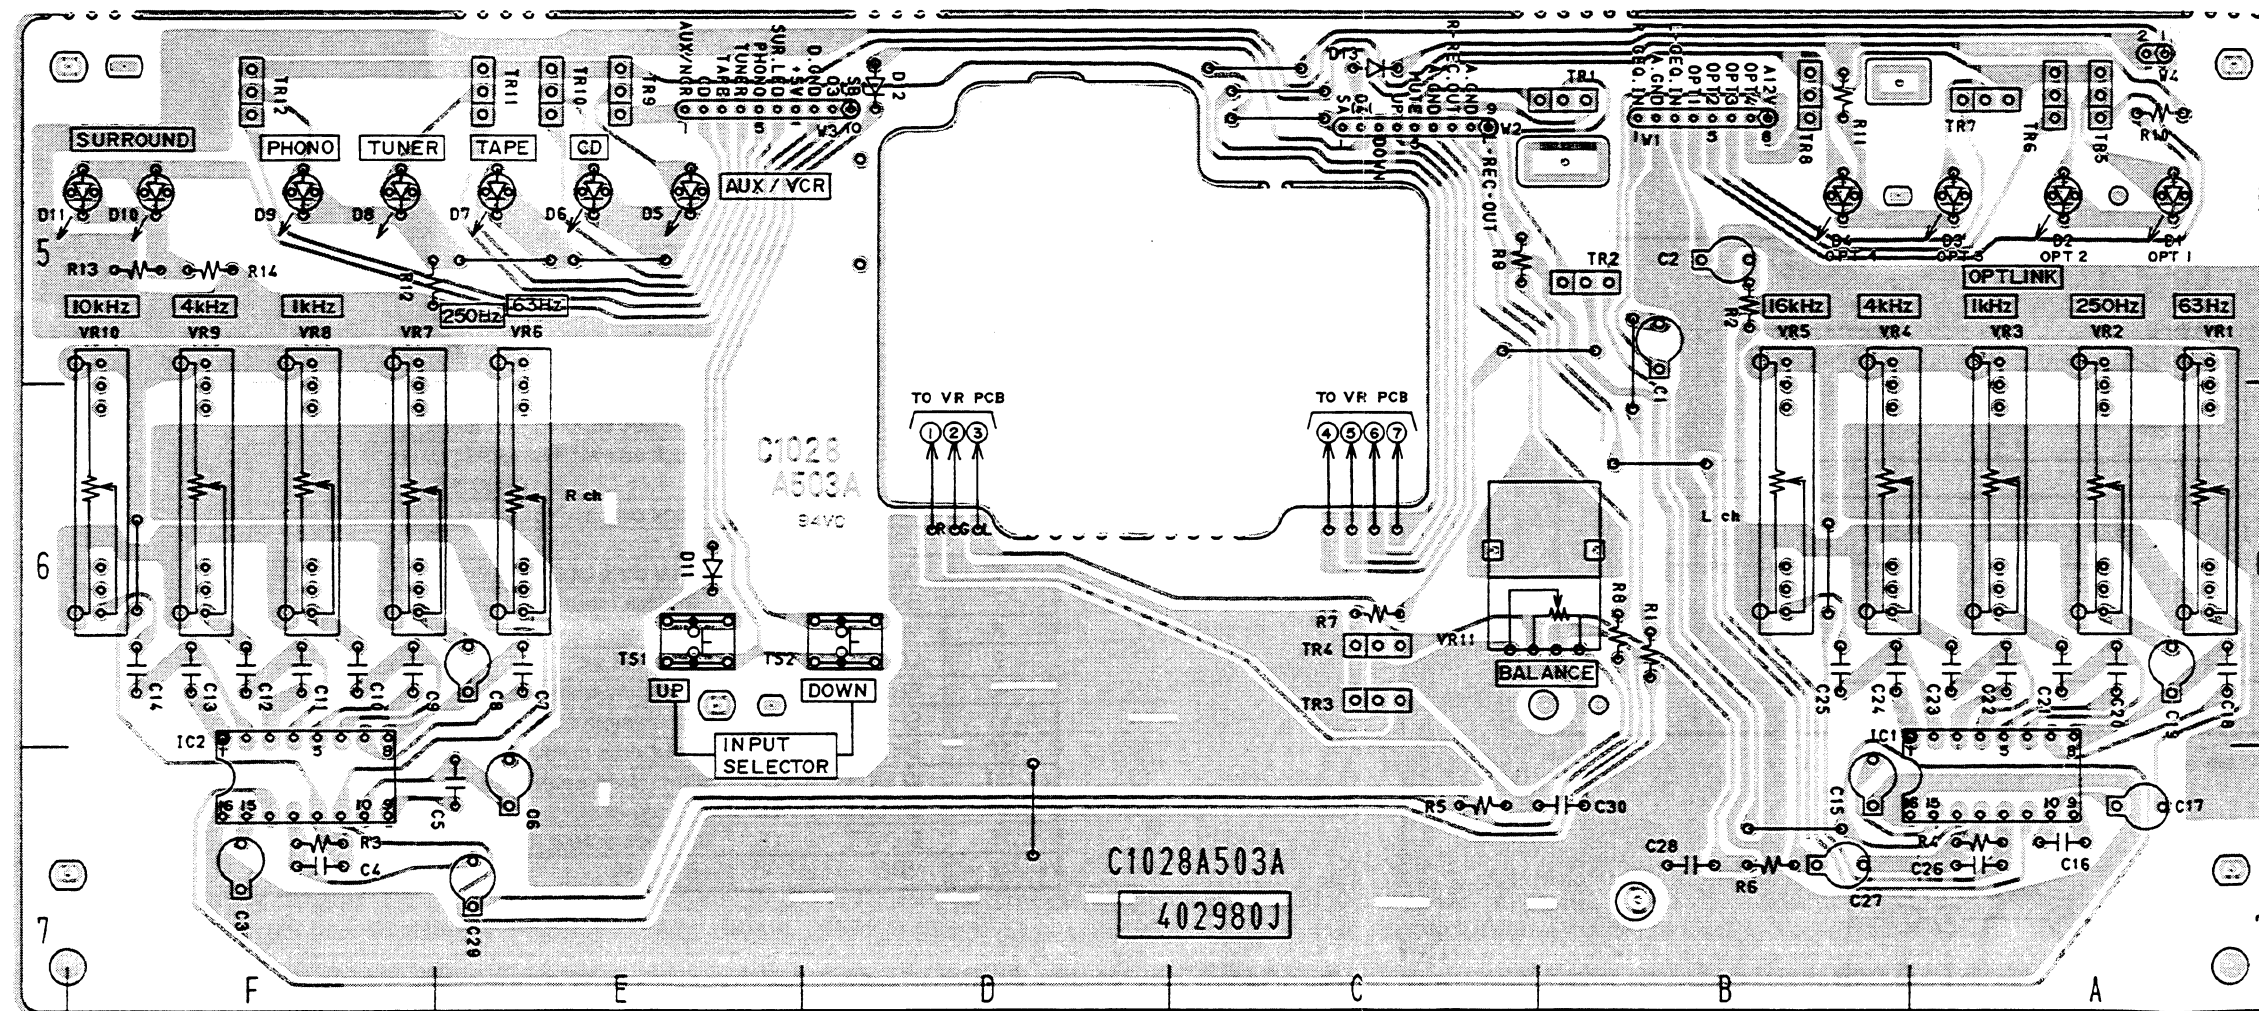

GEQ PCB C1028A503A

PRINCIPAL PARTS LOCATION

ICS

IC1 A7
IC2 F7


CONNECTORS

W1 B5
W2 C5
W3 E5


TRANSISTORS

TR1 B5
TR2 B5
TR3 C6
TR4 C6
TR5 A5
TR6 A5
TR7 A5
TR8 B5
TR9 E5
TR10 E5
TR11 E5
TR12 F5


CAX1101P (DOLBY B-TYPE NR)

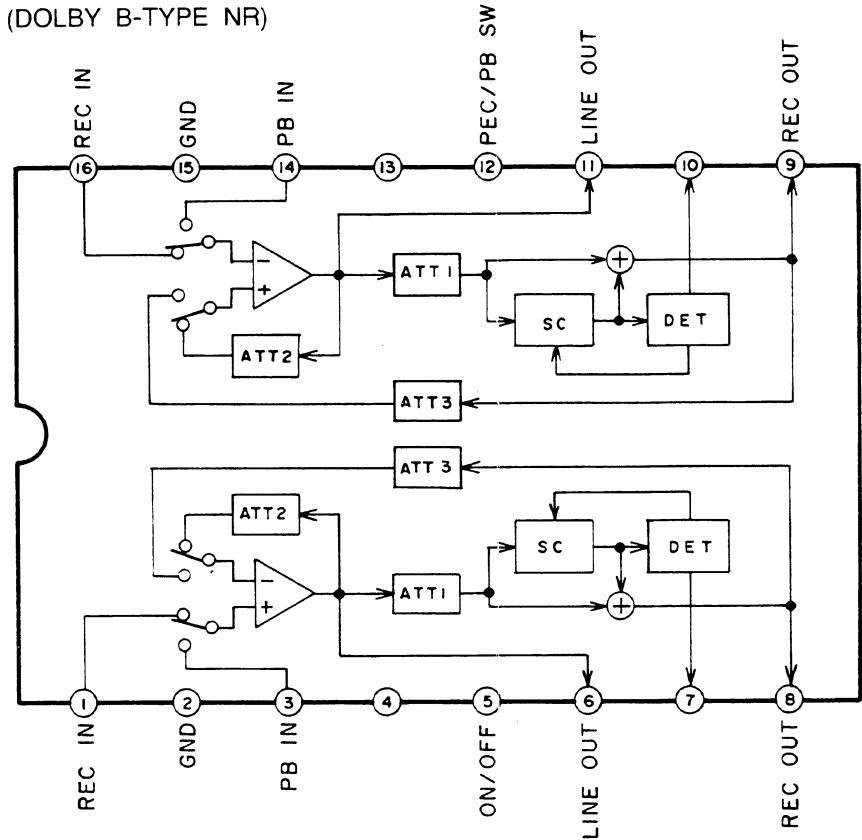

M66312P (LED ARRAY DRIVE)

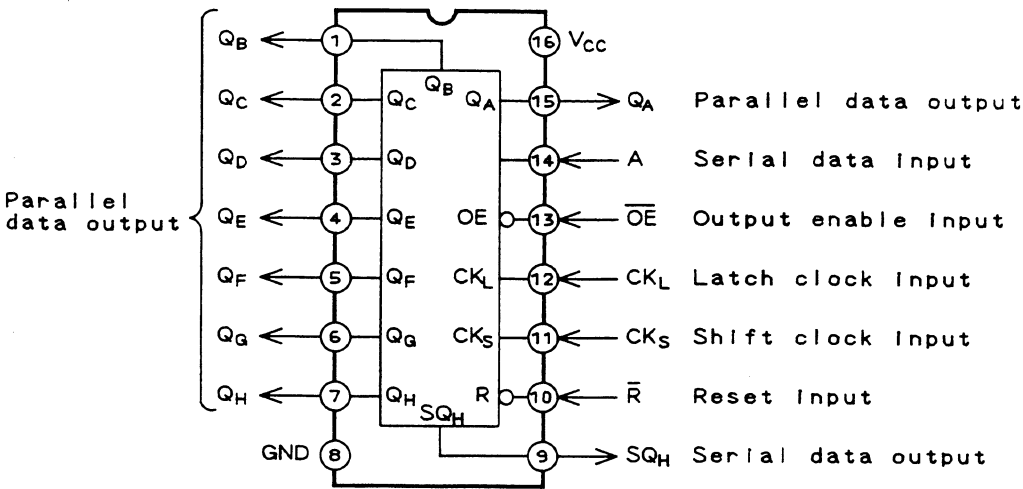

LA2000 (AUDIO LEVEL SENSOR)

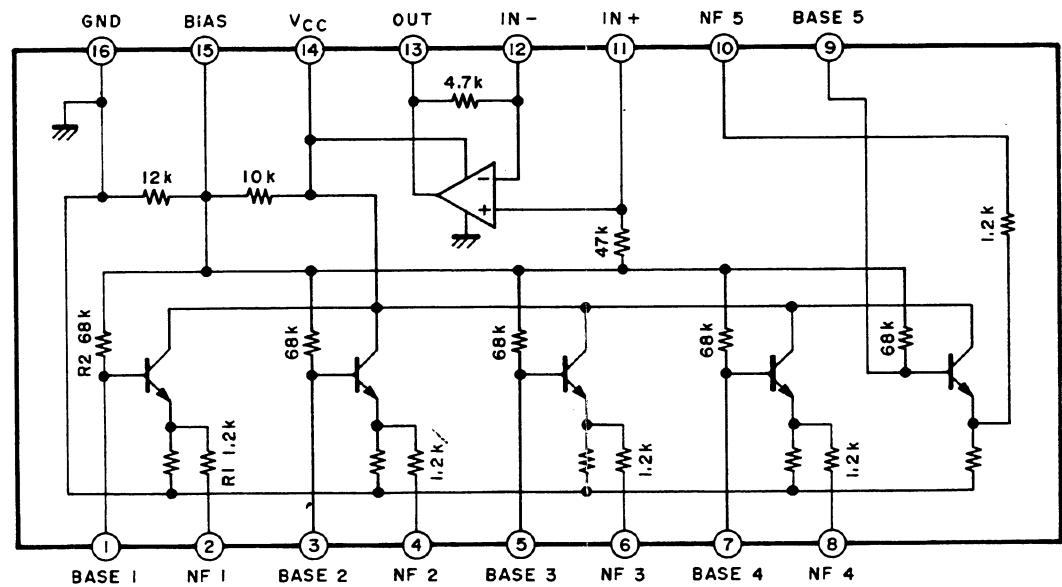

PD0029 (AUDIO DIGITAL FILTER)

PIN NO	SYMBOL	I / O	DESCRIPTION
1	X IN	I	X'tal osc input
2	X OUT	O	X'tal osc output (Not used)
3	CKSL	I	Clock select H : 16.9344MHz L : 8.4672MHz
4	CKO	O	Clock output (Not used)
5	LRCK	I	L, R clock input
6	DATA	I	serial data input (MSB first)
7	BCLK	I	Bit clock input for input data
8	Vss	-	GND
9	LCO	O	Clock output for 2 DAC type (Not used)
10	SHR	O	R ch sample hold pulse output
11	SHL	O	L ch sample hold pulse output
12	D OUT	O	Serial data output (MSB first)
13	W OUT	O	Word clock output (Not used)
14	LR DO	O	L,R select clock output
15	B OUT	O	Bit clock output for data output
16	VDD	-	+B (+5 V)

LA3600 (5 BAND GRAPHIC EQUALIZER)

